



User Manual

Pocket PC - V2950



Table of Contents

PREFACE	8
SAFETY INFORMATION	9
PHONE LAYOUT	12
1 GETTING STARTED	13
1.1 SIM CARD	13
1.1.1 Installation.....	13
1.1.2 Cautions.....	13
1.1.3 PIN and PUK	13
1.2 STORAGE CARD	14
1.3 ACCESSORIES	14
1.4 THE BATTERY	14
1.4.1 Battery use.....	14
1.4.2 Battery Charge Level.....	15
1.4.3 Charging Batteries	15
2 BASIC FUNCTIONS	17
2.1 SWITCHING ON/OFF	17
2.2 NETWORK AUTO SETTINGS	17
2.3 MAIN SCREEN	17
2.3.1 The Start Menu	18
2.3.1.1 General functions.....	19
2.3.1.2 Shortcuts.....	19
2.3.1.3 Major functions	19
2.3.1.4 The Status Bar.....	19
2.3.2 The Display.....	20
2.3.3 Selection of Functions	20
2.4 SMART TODAY	20
2.5 LOCK SCREEN AND KEYPAD	21
2.6 ACTIVESYNC.....	21
2.6.1 Installation.....	21
2.6.2 To synchronise with PC	22
3 CALL FEATURES	23
3.1 MAKING A CALL	23
3.1.1 From The Display	23
3.1.2 From Contact List	23
3.1.3 From Speed Dial.....	24
3.1.4 From SIM Card	26
3.1.5 From Call History	26
3.1.6 From Short Messages	26
3.1.7 Emergency Calls.....	26
3.1.8 International Calls	27



3.1.9	Dial Voicemail Number	27
3.2	ANSWER A CALL	27
3.3	DURING A CALL	28
3.3.1	Hold	28
3.3.2	Mute	29
3.3.3	Loudspeaker On	29
3.3.4	Hands-free	29
3.3.5	Notes	29
3.4	SIMULTANEOUS CALLS	30
3.4.1	Make A Second Call During The First	31
3.4.2	Switch Calls	31
3.4.3	Conference Call	31
4	CONTACTS	33
4.1	VIEW CONTACT DETAILS	33
4.2	EDIT A CONTACT	33
4.3	ADD NEW CONTACT	34
4.4	SPEED DIAL FOR CONTACT	34
4.5	SEND CONTACTS VIA BLUETOOTH	34
4.6	DELETE CONTACTS	35
4.7	SIM MANAGER	35
4.7.1	Phone Contacts	36
4.7.2	SIM Contacts	36
5	INPUT METHOD	37
5.1	SIMULATION KEYBOARD	37
5.1.1	Use The Keyboard	38
5.1.2	Use Letter Recogniser	38
5.1.3	Use Block Recogniser	38
5.1.4	Use Transcriber	39
5.1.4.1	Write Using Transcriber	39
5.1.4.2	Enter Punctuations And Symbols	39
5.1.4.3	Edit Text	40
5.1.4.4	Rewrite The Text	40
5.1.4.5	Transcriber Gestures	40
5.1.4.6	The Transcriber Toolbar	41
6	MESSAGING	42
6.1	TEXT MESSAGE	42
6.1.1	Read Text Messages	42
6.1.2	Edit Text Message	43
6.2	OUTLOOK	45
6.2.1	Add New E-mail Account	45
6.2.2	Send E-mail	47
6.2.3	Send E-mail From Outlook	47
6.3	MMS	47





6.3.1	Chang MMS Settings.....	49
6.3.2	Receive MMS	50
6.4	MENU FOR MESSAGING AND E-MAIL.....	50
6.5	FOLDERS FOR MESSAGING AND E-MAIL.....	50
7	MULTIMEDIA.....	52
7.1	WINDOWS MEDIA PLAYER MOBILE.....	52
7.1.1	Play.....	52
7.1.2	Now Playing.....	53
7.1.3	Library.....	53
7.1.3.1	Update Library	54
7.1.3.2	Play From Library	55
7.1.3.3	Add File Into Playlist.....	55
7.1.3.4	Delete From Library	55
7.1.4	Options	56
7.1.4.1	Playback	56
7.1.4.2	Video.....	56
7.1.4.3	Network.....	56
7.1.4.4	Library.....	57
7.1.4.5	Skins	57
7.1.4.6	Buttons.....	57
7.1.5	Supported File Formats	57
7.2	CAMERA.....	58
7.2.1	Cautions In Using Camera.....	58
7.2.2	Shooting Photos	58
7.2.3	Shooting A Video Clip	59
7.2.4	Where Photos And Video Files Are Stored	59
7.2.5	Options	59
7.3	RADIO	60
7.3.1	General.....	60
7.3.2	Auto Search.....	60
7.3.3	Listen	60
7.3.4	Fine Tune.....	60
7.3.5	Search A Channel.....	61
7.3.6	Sound	61
7.3.7	Frequency Settings	61
7.4	RECORDER	61
7.5	PICTURES AND VIDEOS.....	62
7.5.1	View Pictures	62
7.5.2	Options	62
7.6	JAVA	63
7.7	GAMES.....	64
7.7.1	Bubble Breaker	64
7.7.2	Solitaire.....	65
7.7.3	Marble Gamer.....	65





8	PROGRAMMES	66
8.1	OFFICE MOBILE	66
8.1.1	Word Mobile	67
8.1.2	OneNote Mobile	68
8.1.3	Excel Mobile	68
8.1.3.1	New	69
8.1.3.2	Skills	69
8.1.4	Power Point Mobile	69
8.2	INTERNET EXPLORER	71
8.2.1	Starting Internet Explorer	72
8.2.2	Menu	72
8.3	WINDOWS LIVE	73
8.3.1	Messenger	74
8.3.2	Sign In	74
8.3.3	Add Participants	76
8.3.4	Block And Unblock Contact	76
8.3.5	Change Online Status	76
8.3.6	Hotmail	77
8.3.7	Live Mobile Homepage	77
8.3.8	Windows Live Help	77
8.4	ACTIVESYNC	77
8.4.1	Use ActiveSync	77
8.4.1.1	Sync With PC	77
8.4.1.2	Sync With Server	78
8.4.2	Synchronisation	78
8.4.2.1	Synchronising Inbox	78
8.4.2.2	Synchronising Appointment	79
8.4.2.3	Synchronising Contacts	79
8.4.2.4	Synchronising Via Bluetooth	79
8.4.2.5	Installing Software On The Phone	79
8.5	CALENDAR	79
8.5.1	Calendar Views	79
8.5.2	New Appointment	80
8.5.3	Settings	80
8.6	TASKS	80
8.6.1	Synchronising Tasks On PC	80
8.6.2	Adding A Task On Your Phone	80
8.7	NOTES	80
8.7.1	New Notes	80
8.7.2	Adding Voice In Notes	81
8.7.3	Creating Voice Notes	81
8.8	INTERNET SHARING	81
8.9	CALCULATOR	82
8.10	SEARCH	82
8.11	FILE EXPLORER	83





8.12	GETTING STARTED	83
8.13	TASK MANAGER	83
8.14	SPB HOME.....	84
8.14.1	Quick Dial	85
9	SETTINGS	86
9.1	PERSONAL	86
9.1.1	Owner Information	86
9.1.2	Today	86
9.1.3	Sounds And Notifications.....	86
9.1.4	Buttons.....	86
9.1.5	Phone	87
9.1.6	Menus	88
9.1.7	Input.....	88
9.1.8	Lock	88
9.2	SYSTEM	88
9.2.1	Device Information	88
9.2.2	Memory.....	88
9.2.3	Remove Programmes.....	88
9.2.4	Regional Settings.....	89
9.2.5	Master Clear	89
9.2.6	Clock And Alarms.....	89
9.2.7	Power.....	89
9.2.8	Backlight	89
9.2.9	Certificates.....	89
9.2.10	Screen	89
9.2.11	Error Reporting	89
9.2.12	Encryption.....	90
9.2.13	About	90
9.2.14	Motion Sensor.....	90
9.2.15	GPS	92
9.2.16	AGPS Settings.....	92
9.3	CONNECTIONS	93
9.3.1	Beam	93
9.3.2	Wireless Manager.....	93
9.3.3	Wi-Fi	95
9.3.4	Bluetooth.....	95
9.3.5	Connections.....	99
9.3.5.1	GPRS.....	99
9.3.5.2	Dial-Up.....	101
9.3.5.3	Connect To PC Through USB.....	102
10	HELP	103



PREFACE

V2950 is a communication product running Microsoft® Windows Mobile 6 Professional. To experience the optimum performance of your phone, please read this users guide thoroughly.

Your phone contains numerous powerful office applications and entertainment software which help you at work and fulfil your spare time. Please follow the guidelines given below:

- To use this phone safely and legally, read the section "Safety Information" carefully;
- Before using the phone for very first time, charge the battery with the original charger for 8 to 10 hours. A new battery may reach its peak performance only after two or three cycles of full charging and discharging.
- Similar to a computer, your phone will perform best when enough memory is present. Reboot the phone to clear the memory to store its peak performance.
- Running multiple programmes at the same time may prolong the response time of the phone. If it starts to react slowly, try rebooting the phone to recover.
- In the event that the contents of this manual are not consistent with menu options on the phone, follow the prompts on the phone.
- Some services described in this manual may not be supported by all the networks. Contact your network operator or service provider for details.



SAFETY INFORMATION

To use your phone safely and effectively, please read these guidelines carefully:

HANDLING THE PHONE

When you are using the phone, keep a distance of at least 2.5 cm away from your body. In case there is a need of phone slipcover, belt clip or other accessories to carry your cell phone, ensure that the accessories are approved by the manufacturer. Otherwise, it may exceed the upper limit of radio frequency leakage.

ENERGY LEAK OF RADIO FREQUENCY

Your phone is a low-power, wireless transmitter and receiver. After being powered on, it will periodically send and receive radio signals while its transmission power is controlled by the network. This device complies with local standards restricting energy leak of radio frequency.

IN PUBLIC

Some public places, such as hospitals, health resorts or other medical facilities, post signage prohibiting the usage of cell phones. Heed such warnings and power off your phone in designated public places.

COMPATIBILITY OF RF INTERFERENCE

Your phone may interfere with other devices that are not properly designed for RF shielding or configured for RF compatibility.

IN AIRCRAFT

Switch the device off and remove the battery when you are in or near an aircraft. It's illegal to use cellular equipment on board aircraft since it may cause interference to aircraft navigation systems and/or networks. Violators may be suited or face severe penalties.

PACEMAKERS

If you are using a pacemaker, do not carry your phone (while switching on) in a breast pocket. A minimum separation of 15 cm should be maintained between the wireless phone and a pacemaker. Use the ear opposite the pacemaker to minimise the potential for interference. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

HEARING AIDS

Wireless phones may interfere with some hearing aids. In the event of such interference, you may consult to your service provider.

OTHER MEDICAL EQUIPMENTS

For other personal health care equipments, consult your service provider. Consult the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any queries.





ROAD SAFETY

Please comply with local traffic laws and regulations. If the driving condition is getting worse, pull off from the road before you make or receive calls. If your vehicle has airbags keep your phone away from where the inflated airbags can reach. Otherwise, you may be seriously hurt by the phone once the airbags expand.

POTENTIALLY EXPLOSIVE ATMOSPHERES

Switch off your phone when present in any area with a potentially explosive atmosphere and obey all signs and instructions. These areas include fuel depots (below deck on boats, fuel or chemical transfer or storage facilities), areas where the air contains chemicals or particles such as grain, dust or metal powders. They are usually marked with signs, but not always so.

BATTERY

Any contact of the battery's exposed electrodes with a conductor, such as jewellery or keys, may cause damage to possessions or bodily injury.

OTHERS

The phone is comprised of precise electronic circuits, magnets and a battery system. Caution is advised when handling the components, particularly with regard to the following:

- Keep the phone and its accessories dry. Your phone is not water-proof.
- Keep the phone away from extreme temperatures.
- Do not place it near a flame or a lit cigarette.
- Do not scratch on it.
- Avoid dropping or severe knocking of the phone to prevent damage.
- Keep the device away from computer disks, credit cards, traveling cards or other magnetic objects, otherwise the message stored in the magnetic disk may be affected.
- Do not place it on an automobile dashboard, window or where the sun rays can penetrate.
- Do not remove the battery when the power is on.
- Do not discard the battery in fire. It may explode.
- Do not place the battery in mouth. It may be poisonous.
- Do not try to disassemble the phone or its accessories.
- Use only approved model applicable batteries. Incorrect batteries may cause explosion. Follow the manufacturer's instructions to dispose used batteries.
- Heat is generated by prolonged usage of the headphones and by prolonged charging of the cellular device.
- A moist or anti-static cloth may be used to wipe or clean the phone. Do not use a dry cloth that attracts static current.
- Do not use a chemical reagent or a cleanser containing abrasives.
- Avoid damage to the phone's casing.
- The metal material contained in the phone may cause you in hyper





- susceptibility, which depends on your physique or health status.
- Parts such as liquid crystal display and pick-up head belong to fragile parts, keep them carefully such that the phone may not be impacted or squeezed.



PHONE LAYOUT





1 GETTING STARTED

1.1 SIM CARD

1.1.1 Installation

1. Keep the phone facing down, hold it tightly with both of your hands.
2. Press the battery cover with thumbs, slide it down and then remove the battery.
3. Insert the SIM card into the slot keeping the contact area of the facing down.
4. Place the battery back in the groove and make sure its properly installed.
5. Attach the back cover, slide it until it clicks.

1.1.2 Cautions

- If there's fault with the SIM card, contact your service provider.
- Keep all SIM cards out of the reach of small children.
- SIM card and its metal contact are susceptible to scratches and it gets damaged by bending.
- Keep the SIM card away from static electricity, dust and water.

1.1.3 PIN And PUK

PIN

PIN is an identification code that is provided with the SIM card. You are protected by the PIN from unauthorised use of your SIM card. After initiating the PIN protection, you are required to enter the PIN everytime you switch on the phone. After three consecutive incorrect PIN code entries, the SIM card will be blocked. Nobody can then access the data in the card or use its services.

PUK

When the SIM card is locked, a PUK (Personal Unlock Key) is required to unlock it. Ten consecutive incorrect PUK entries will cause permanent lockup of the SIM card. PUK is usually provided with the SIM card. If you have lost your PUK or its not provided, contact your service provider.

1.2 STORAGE CARD

A storage card can be plugged into your phone to expand the storage capacity.

 


To install a storage card, simply insert memory card into the slot. If it can't be inserted, flip it and try again.

To remove the card, push it inwards with your finger. It will pop out from the slot. Do not pull it forcefully.

1.3 ACCESSORIES

The main accessories included in the phone are depicted in the figure:

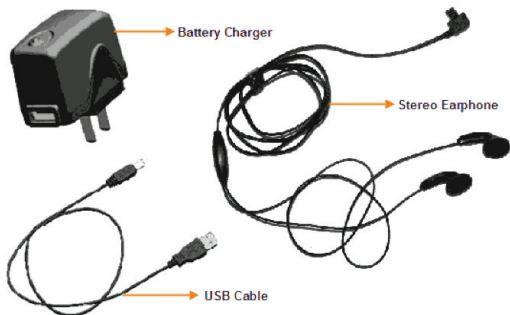

1.4 THE BATTERY

1.4.1 Battery Use

- Your phone is powered by a battery which has a limited life. When a battery has a significant decrease in its working time, replace it.
- Switch off your phone before removing the battery.
- Do not leave the battery on charge for too long, since it may reduce the battery's life.
- Excessively high or low temperature will have an impact on the charging capability. Maintain its working temperature at 0-45°.
- Do not use the battery for other purposes.
- Do not discard the battery in fire or in water.
- Do not try to disassemble or fix a battery. Choose the certificated or approved batteries by the manufacturer.



- Avoid short circuit. Do not use damaged chargers or batteries.
- Hot or cold weather will decrease the battery's capacity and life. Excessively high or low temperature may result temporary system halt, even though the battery is full.
- Dispose used batteries properly. Do not throw them into a dustbin.

1.4.2 Battery Charge Level

1. Tap the battery icon on "**Today**" screen;
2. To check the charge level, select **Start** -> **Settings** and tap **Power** in System.

1.4.3 Charging Batteries

If the charge level goes lower than the working voltage, a reminder of low battery will be prompted on the screen as an alert sound. Data may be lost and the phone will power off if the battery is not charged or replaced on time.

A Lithium-ion battery comes with this phone. Its recommended to use the manufacturer's charger and batteries for best performance.

1. Plug the charger carefully into the USB charger slot.
2. Connect the charger to the AC outlet while the phone is powering on. The status indicator is shown in red light. The battery icon on the screen shows the charging progress. When the phone is powering off and its still put on charge, the screen shows the charging icon.
3. Before using the battery first time, charge the battery with the original charger for 8 to 10 hours. A new battery may reach its peak performance only after two or three cycles of full charging and discharging.
4. After the charging completes, the status indicator shows the charging stat. If the phone is off, the screen displays a notification of completion.
5. Disconnect the charger with the AC outlet and the phone.



Note:

A USB cable can be used to charge the battery. The voltage on the PC's USB port, however, does not fully meet the requirement for charging the battery therefore it can have a negative impact on the battery's life span. Thus, a battery charger is preferred.



2 BASIC FUNCTIONS

2.1 SWITCHING ON/OFF

To switch on or off your phone, press and hold the On/Off key for a couple of seconds.

 
If there's no SIM card when switching on, a reminder prompts.

2.2 NETWORK AUTO SETTING


When you first switch on your phone the power supply will pop-up on screen to automatically setup the network.

Network configuration can automatically setup all kinds of connections, such as: GPRS, WAP and MMS, the user need not manually set the network configuration.

Internet pop-up box is automatically set, when prompted, choose yes to access.

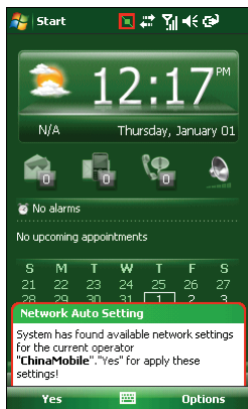

Note:


If you do not see the prompt box, click on the title bar .

2.3 MAIN SCREEN

After the phone is switched on, the “Today” screen gets displayed.



2.3.1 The Start Menu

All the functions can be found in the Start menu. Click  on the top left corner of the screen with the touch pen to display the menu which includes shortcuts, general and major functions.





2.3.1.1 General functions

General functions are listed. Tap with the touch pen or press the navigation key to select an option. For more information on these functions, refer to the following sections.

2.3.1.2 Shortcuts

It shows the shortcut icons of the latest five functions performed, which may vary everytime you use the phone. Tap with the touch pen or press the navigation key to select an option.

2.3.1.3 Major Functions

You can browse all the applications that have been installed and configured on the phone and get instructions on how to use the device.

Options are:


 










Programmes – View and use all the available features.

 Settings – Configure functions of the phone.











 

 
 
Help – View the online-help.

2.3.1.4 The Status Bar

Icons in the status bar are shown to display working status including battery charge level, signal strength, GPRS and Bluetooth. The status bar icons are listed below:

Icon	Description
	Indicates the battery is fully charged
	Indicates the battery is very low
	Battery charging
	Sound on
	Sound off
	Ring in vibration mode
	No SIM card
	Indicates maximum signal strength
	No Signal
	Voice call in progress
	Call on hold
	Missed call



	GPRS available
	EDGE available
	GPRS connected
	EDGE connected
	Unread message
	New voice message
	New IM
	Connection is active
	Synchronisation in progress
	Bluetooth enabled
	Bluetooth voice gateway
	A2DP
	Multiple reminders
	Wi-Fi connected

2.3.2 The Display

You can see information about the phone on the display. Use the touch pen to select an option.

2.3.3 Selection Of Functions

The functions may vary with the phone's state and features.

2.4 SMART TODAY

In SPB interface, press/click on  icon, choose “Show Today” when Smart Today is displayed.



Click on the Programme icon in Smart Today, to plug into the programme interface.

Click the Settings icon in Smart Today to enter the settings of plug-in interface.



2.5 LOCK SCREEN AND KEYPAD

Select **Device lock** to lock the screen and the keypad, thereafter no operations will be allowed.

To unlock, click Unlock on the lower left corner, and then tap Unlock.

If a call comes in the lock mode, you can answer it without unlocking the phone. Your phone will remain locked after the call is over.

2.6 ACTIVESYNC

With Microsoft® ActiveSync®, the data in your phone can be synchronised through a USB cable with the PC.

ActiveSync® will make sure the information in the phone can be updated with that in the PC.

2.6.1 Installation

Your phone has an in-built ActiveSync and you need to install the software in your PC. You should follow the prompts on the screen to install ActiveSync from the CD-ROM.

2.6.2 To Synchronise With PC

By default, contacts in OUTLOOK, calendars and tasks in the PC will be automatically synchronised to your phone. You can use this information in your phone as in the PC. Select options to synchronise before plugging in the cable and then tap OK to proceed.

Follow the prompts on the screen and click Next to start. During the process, a sync icon on the phone will keep rotating and the sync progress and items will be shown.

Once the synchronisation is done, press the left soft key to change from “**Sync**” to “**Stop**”. Press the right soft key to check for the sync information. Press the left soft key again to start another round of synchronisation.



Note:

If your PC runs Windows Vista, you need to install it from Windows Mobile Device Centre. Refer to the user guide of Windows Mobile Device Centre for more information.





 
3 CALL FEATURES

3.1 MAKING A CALL

A few options are available to make calls.

3.1.1 From The Display

- On the standby screen, tap **Phone** or press the **Send** key to open the phone keypad;
- Tap the **Keypad** key and then tap **Talk** or press **Send** key to dial the phone number;
- To redial, tap **Talk** or press **Send** key to dial if the phone number already appears on the screen;
- Tap **End** or press **End** key to end the call.


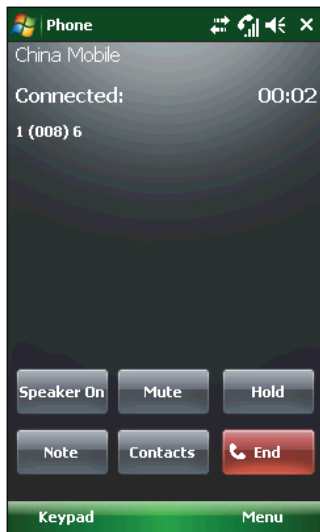




3.1.2 From Contact List

Tap **Contacts** on the lower right of your screen to open the contact list. Select a contact and then dial in one of the two ways mentioned below:

  - Highlight the contact and then tap **Send**;
- Open the window displaying details of the contact, select one number (if there are several) and then tap **Call**, to make a call.

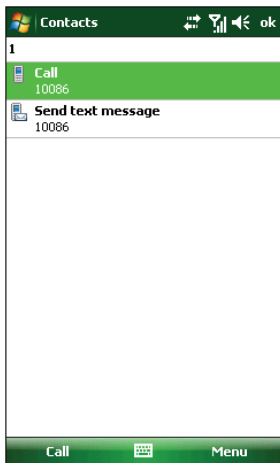
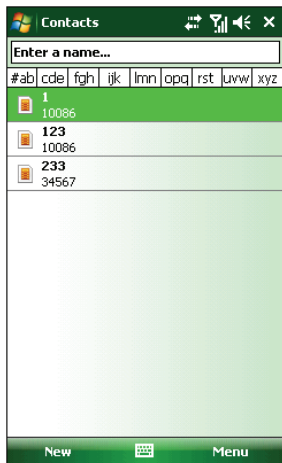


3.1.3 From Speed Dial

You may create speed dial number for the phone numbers in the contact list. To dial, press and hold the key on the screen that corresponds to a speed dial number (if the speed dial number is set with two digits, enter the "tens" digit and then press and hold the "units" digit).

To set a speed dial number, use one of the following two ways:

  1. Select an entry from the contact list; press the centre key to view its details. If there are several phone numbers, highlight one of them and then select **Add to Speed Dial** from **Menu**. Select a speed dial number in the settings page.

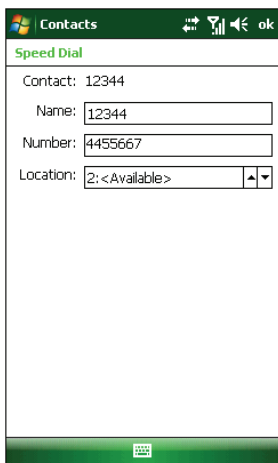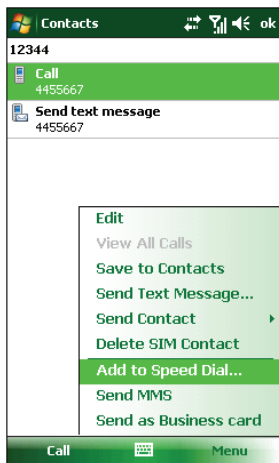


Note:

"0" and "1" cannot be used as speed dial numbers since both the digits are reserved by the system.



 2. Tap **Speed Dial** from Menu to display the speed dial list. Select **New** from **Menu** to show the contacts list and then choose the numbers to be added in the speed dial.

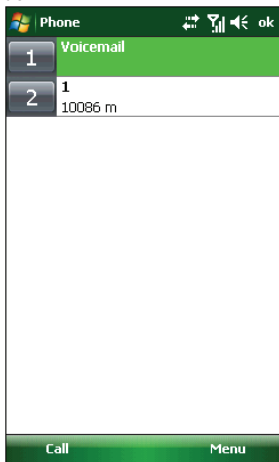

3.1.4 From SIM card

All the records stored in the SIM card have a secret key (the key can't be changed). To dial a phone number, you only need to enter the secret key followed by “#”.

3.1.5 From Call History

 
Press Send key at the main page to open the calling screen, tap **Call history** to show the call records including answered, unanswered and dialed calls. Highlight an entry and then press Center key or tap **Call**, to make a call.





3.1.6 From Short Messages

Scroll the highlight bar in the short message list, locate the person you want to call and then press the Send key. A message is then prompted for confirming the phone number, tap **Call** or press Send key to start the dialing operation.

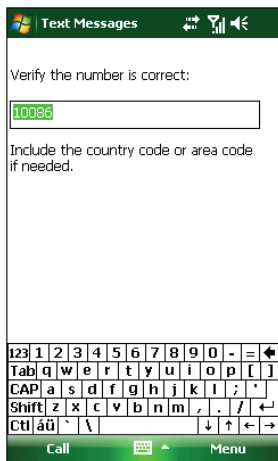

3.1.7 Emergency Calls

Your wireless service provider provides one or more emergency phone numbers (such as 112) that you can call under any circumstances. As long as you are within the service area, you can make emergency calls even without a SIM card.





3.1.8 International Calls

Open the phone keypad, press and hold key “0”, release and then enter prefix “+”, input the country code, area code and the phone number and then press the Send key.

3.1.9 Dial Voicemail Number

Voicemail is a type of network service. If you have enabled call forward to voicemail box, unanswered calls will be directed to the voicemail messages.

 
Press and hold key “1” on the display and then your phone will dial the voicemail number. Contact your network operator to obtain the voicemail number.





3.2 ANSWER A CALL

When there's an incoming call, press the left soft key, Send key or tap **Answer** to answer a call. Press the right soft key, End key or tap **Ignore** to reject a call.

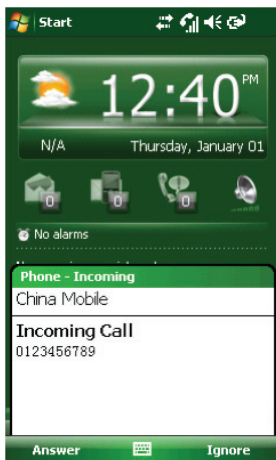

3.3 DURING A CALL

During a call, select options on the screen or in the **Menu** for accessing more functions.



Note:

The availability of these features depend on your service provider and whether you have subscribed to them or not.

3.3.1 Hold

If you tap **Hold** during a call, the party you are talking to and you will not be able to hear each other anymore. However, the call will not be suspended. It will be retrieved after you tap **Unhold**.

 


During a call, tap the lower left part of your screen and then enter another phone number on the keypad and press Send key for putting the first call on hold.

After the second call gets through, press Center key or tap **Swap** to switch between the two calls. But the one you are talking to can hear you only and the one put on hold can't.

3.3.2 Mute

If you need to turn off the Mic for a while during a call, tap **Mute**. You can hear what the other party says but he/she won't be able to hear you. Tap **Unmute** to restore.

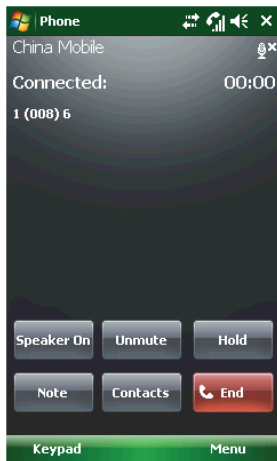

3.3.3 Loudspeaker On

After the loudspeaker is on, the sound will be amplified.


3.3.4 Hands-Free

Select **Turn Speakerphone On** in **Menu** to turn on Hands-free. It enables you to hear the call clearly without holding the phone near the ear. Select it again to turn it off.

3.3.5 Notes

You may make notes during a call. Tap **Note** to open the window (as given in the picture below); write your notes and then tap **OK** to save it.

The screenshot shows a 'Notes' window with a green header bar containing a Windows logo, the title 'Notes', and icons for call status, signal strength, and volume, followed by an 'ok' button. The main area contains the following text: 'Caller:', 'Company:', 'Phone: tel:1 (008) 6', 'Date & Time: 1/3/09, 1:52 p', and 'Notes:' followed by several empty lines for text entry. At the bottom, there is a green bar with 'New', a keypad icon, and 'Menu'.

In the call history, calls with notes show an icon as .

The screenshot shows a 'Phone' call history window with a green header bar containing a Windows logo, the title 'Phone', and icons for call status, signal strength, and volume, followed by an 'ok' button. The main area displays a list of calls with a blue note icon next to the first three entries. The list items are: '1 (008) 6' at 1:52 p, '1 (008) 6' at 1:50 p, '1 (008) 6' at 1:39 p, '01064399889' at 1:37 p, 'Emergency Call 112' at 1:36 p, and '1 (008) 6' at 1/1/09. At the bottom, there is a green bar with 'Call', a keypad icon, and 'Menu'.

To read notes, select
Start → Programmes → Note.

3.4 SIMULTANEOUS CALLS

If there's an incoming call while you are on the other call, a notification will be prompted. You may answer or reject it. If you answer it, you may switch between these two calls or converse with them in a conference call in which you can talk to both the callers at a time. Up to 6 parties can be involved in a conference call.

3.4.1 Make A Second Call During The First

You can make a second call while you are on the other call, doing so will put the first call on hold.

Perform the above mentioned as follows:

- Tap **Keypad** and then enter the phone number;
- Press the Send key.

3.4.2 Switch Calls

If there's an incoming call while you are in the first call, tap **Answer** to answer it. The first call will be on hold. The other party in the first call can't hear while you are talking to the second caller.

 
Tap **Swap** to talk to either of the callers. After you put on call on hold, the other will be put on unhold. You can also put both calls on hold.

3.4.3 Conference Call

Your phone supports conference call with up to 6 parties. All the five callers can listen to each other.

To initiate a conference call, do the following:

1. Make or receive a second call during the first call;
2. After doing the above mentioned, select **Conference** in **Menu**, the ongoing call and the call on hold will be thus, put on the conference call mode. Repeat step 1 and 2 to add more parties.
3. If you need to talk privately with one of the parties in conference call, select **Private** in **Menu**. A list of the parties in the conference call

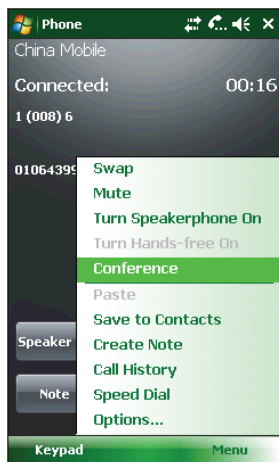



will appear on the screen, select the one with whom you want to talk privatel. You can talk with him/her while the conference call is put on hold. Other parties in the conference call can proceed normally.

4. During the conference call, press the End key to end the whole conference.



4 CONTACTS

You may view or update information about contacts.

The contacts information can be saved in the SIM card or in the phone. Such information in the SIM card usually includes one name and one phone number (depends on the type of the SIM card and service). You can store much more in your phone like – contact's name, multiple phone numbers, e-mail addresses and mailing addresses, as well as other information such as birthdays and holidays.

 
4.1 VIEW CONTACT DETAILS

A list of contacts will appear on the screen.

- Contacts are sorted in alphabetical order;
- Scroll the highlight bar to locate a contact for its details;
- If there are several phone numbers for one contact, the numbers and their attributes will be displayed.

4.2 EDIT A CONTACT

Select a contact from the list and then tap **Edit** in Menu.

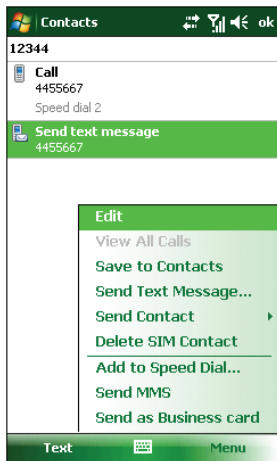



4.3 ADD NEW CONTACT

Tap **New** to add a new contact, fill in each item and then tap . The new contact will then be shown in the list.

If you are about to make an international call or a call with an extension, you may need to pause for a bit after dialing the phone number, and then continue to dial the extension or other following numbers. If it is the case, you have the option to insert a pause sign “p” from the menu between the phone number and the extension number. Insert one or more “p” makes length of the pause time long. To dial manually after the pause, insert a Wait from the menu.

You can add a contact during a call, or from the received text message or email, or from the call history.

4.4 SPEED-DIAL FOR CONTACT

A one or two-digit speed-dial number can be set for contacts stored in the phone. Press and hold the speed-dial number (for two-digit, press the “tens” digit and then press and hold the “units” digit) until it dials.

To set the speed-dial number, select the phone number in the page showing contact details, tap “Add speed-dial” in the menu, and then tap “OK”.

 
The range for speed-dial numbers is between 2 and 99. 0 and 1 are reserved by the system.



4.5 SEND CONTACTS VIA BLUETOOTH

With Bluetooth, you may send the information of contacts to other phones

In the contact list, select **Send Contact** in the **Menu**, and then tap **Beam**. The phone will then start to search for Bluetooth device. After it's been detected, tap **Send**.

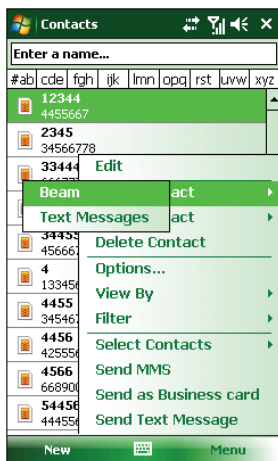


4.6 DELETE CONTACTS

You may delete contacts either from the contact list or on the page showing details.



4.7 SIM MANAGER

 Select **Contact Admin** from Programs. The contacts in the SIM card can be saved into the phone, and vice versa. It may take a while to access contacts information in the SIM card. After it's done, the screen displays contacts in the phone with a number at the top-right corner.

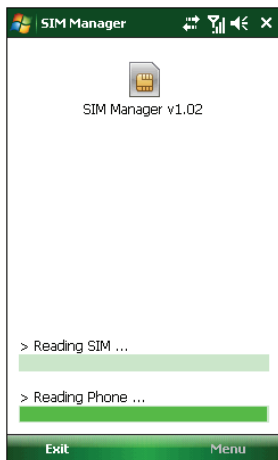

4.7.1 Phone Contacts

1. If there's no contact stored in the phone, options for all other items are grey except setting and SIM.
2. If there're one or more contacts in the phone, you may copy all or some of them to the SIM card or delete all or some of them.

4.7.2 SIM Contacts

The contacts in the SIM card are allowed to save only phone number. To copy a contact to the phone, choose **"Mobile"**, **"Home"** or **"Business"**.

1. If there's no contact stored in the SIM, options for all other items are grey except setting and phone.
2. If there're one or more contacts in the SIM, you may copy all or some of them to the phone or delete all or some of them.



5 INPUT METHOD

 
5.1 SIMULATION KEYBOARD

When you start a program or select a field that requires text or numbers Input Panel becomes available automatically. Input Panel provides various input methods which is available on your device, including Block Recognizer, Keyboard, Letter Recognizer, and Transcriber. By default, the Input Panel icon appears on the menu bar to indicate which input method is currently selected. The Input Selector arrow (shown at the right side of the Input Panel icon) opens a list of available input methods.

Show or hide Input Panel

- Tap the **Input Panel** icon on the menu bar.

Example:

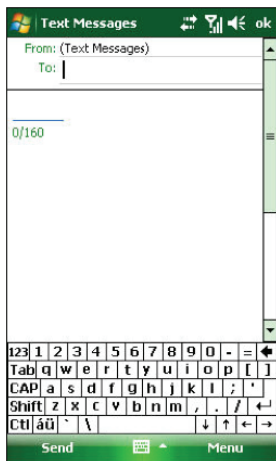

Icon	Input Method
	The On-Screen Keyboard.
	Letter Recognizer or Block Recognizer.
	Transcriber



5.1.1 Use the Keyboard

To enter text, symbols, and numbers, you can use the standard On-Screen Keyboard.

Use the standard On-Screen Keyboard.

The On-Screen Keyboard is available when text entry is possible. You can enter text by tapping keys on the keyboard that are displayed on the screen.

Enter text using the On-Screen Keyboard.

1. In a program, tap the **Input Selector** arrow, and tap Keyboard.
2. Enter text by tapping keys on the **On-Screen** Keyboard.

Enlarge the On-Screen Keyboard.

1. Tap the **Input Selector** arrow, and then tap Options.
2. In the Input Method list, select Keyboard.
3. Tap Large Keys.

5.1.2 Use Letter Recognizer

With using **Letter Recognizer**, you can write individual letters, numbers, and punctuation, which can be converted into typed text.

1. Insert numbers and symbols in the designated writing area.
 - Enter capital letters by writing in the ABC (left) area of the box.
 - Enter lower case letters by writing in the abc (middle) area of the box.
 - Enter numbers by writing in the 123 (right) area of the box.
 - Enter punctuation and symbols by tapping in either area of the box and then writing the desired characters.

5.1.3 Use Block Recognizer

With Block Recognizer, single stroke can be used to write letters, numbers, symbols, and punctuation, which can be converted into typed text.

1. In a program, tap the Input Selector arrow, and then tap Block Recognizer.
2. Write characters, numbers, and symbols in the designated writing area.
 - Enter letters by writing in the abc (left) area of the box.
 - Enter numbers by writing in the 123 (right) area of the box.





- Enter symbols and punctuation by tapping in either area of the box and then writing the desired character.

5.1.4 Use Transcriber

Transcriber is a handwriting recognition program that allows you to write in cursive, print, or a combination of both. Transcriber works transparently in the background of programs, recognizing words with its integrated dictionary. When Transcriber is turned on, it interprets stylus movement anywhere on the screen as handwriting input. For more information about using Transcriber, see **Help** on your device.

Start Transcriber


1. Start a program that accepts user input, such as Word Mobile.
2. Tap the Input Selector arrow, and tap Transcriber. The Transcriber introductory screen appears.


5.1.4.1 Write using Transcriber

1. In a program, position the cursor where the text should appear.
2. Use the stylus to write anywhere on the screen. The handwriting will be converted to text shortly after you lift the stylus from the screen.

5.1.4.2 Enter punctuation and symbols

Transcriber comes with an on-screen keyboard that provides an easy way to add punctuation or a special symbol to existing text.

- In a program, tap  on the Transcriber toolbar. The keyboard remains visible the button is tapped again.

Tips: To reposition the keyboard, tap and hold the title bar, then drag to the desired location. When no text is selected, you can also open the keyboard by doing the  Gesture.

5.1.4.3 Edit text

1. In a program, draw a line across the text which is desired to edited.
2. After you lift the stylus from the screen, the line will disappear and the selected text will be highlighted.

5.1.4.4 Rewrite the text

Use gestures to capitalize letters, insert a space, and so on. For information about using gestures, see "Transcriber Gestures" in this chapter.





5.1.4.5 Transcriber Gestures

Use quick strokes of the stylus to edit your text or to insert returns, spaces, or tabs.

Tip Enter, Space, and Backspace buttons can also be used with the Transcriber toolbar.

Do	To
	Insert a paragraph return at the cursor. The horizontal portion of the gesture must be at least two times longer than the vertical portion.
	Insert a space at the cursor. The horizontal portion of the gesture must be at least two times longer than the vertical portion.
	Move the cursor one space back and erase any text. Do the gesture by drawing a line from right to left.
	Open the menu of alternate words if a word is selected or the on-screen Transcriber keyboard if no text is selected. Do the gesture by drawing a line straight down and back up.
	Change the capitalization of a selected letter, word, or block of text. Do the gesture by drawing a line straight up.
	Undo the last action. Do the gesture by drawing a line straight up and back down.
	Copy the selected text. Do the gesture by drawing a line from left to right and back.
	Cut the selected text. Do the gesture by drawing a line from right to left and back.
	Paste copied or cut text. Do the gestures by drawing a line from the lower left of the screen diagonally up toward the right and back down to the right.
	Insert a tab. The horizontal portion of the gesture must be at least two times longer than the vertical portion.

5.1.4.6 The Transcriber toolbar

The Transcriber toolbar, which appears at the bottom of the screen when Transcriber is open, provides easy access to several tools, Enter, Space, Backspace buttons, Left and Right arrow buttons.





Tap	To
	Open the Options dialog box, where you can set options such as writing direction, text entry, and shorthand.
	Open Letter Shapes, where you can set your personal writing styles to maximize recognition.
	Use the miniature keyboard to quickly enter numbers, punctuation, and other symbols.
	<p>Change the character recognition mode.</p> <ul style="list-style-type: none">• a mode. This is the default for optimum handwriting recognition.• 123 mode. Numbers and some letters are allowed and the calculator is activated.• A mode. All letters are automatically capitalized. <p>If you are in A or 123 mode, recognition returns automatically to the default mode once you lift the stylus.</p>
	<p>Insert a space at the cursor.</p> <p>Insert a paragraph return at the cursor.</p>
	Move the cursor one space to the left.
	Move the cursor one space to the right.
	Move the cursor one space back and erase any text.
	Open Transcriber Help.





6 MESSAGING


You may edit, send and receive text messages, MMS or emails.

6.1 TEXT MESSAGE

The service for text messaging is offered by your service provider. Wireless subscribers can send and receive brief text messages.

 
Before sending the first text message from your phone, make sure the number of SMSC has been set. Contact your service provider for the local number.

6.1.1 Read Text Messages

Tap  and then select Messaging. By default, the text message Inbox appears.

The message list displays part of the text.

In the Inbox, tap Received to sort text messages

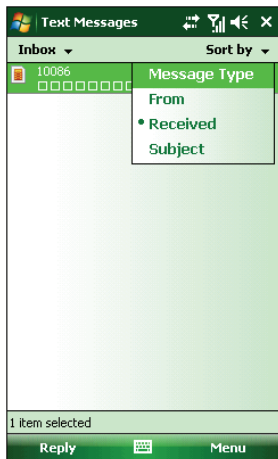

To open a message, tap it with the touch pen, or press the navigation key to scroll the highlight bar and then press the Center key. Tap Menu for other options.

 




6.1.2 Edit Text Message

In the Inbox, tap Menu; select New to open the editing box.

Enter the recipient's phone number in the "To" box, or select Add Recipient... in the Menu and then choose a phone number. Your phone supports group sending to multiple recipients.

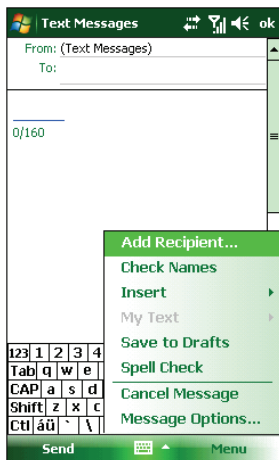


After specifying the recipient, press the navigation key to move the cursor to the editing box.

Select My Text in the Menu to display common phrases for you to choose from.





At the lower-left of the editing area shows the number of characters already entered and the total number allowed.

 After finishing your text message, tap Send. By default, the message will be saved in the Sent Items.

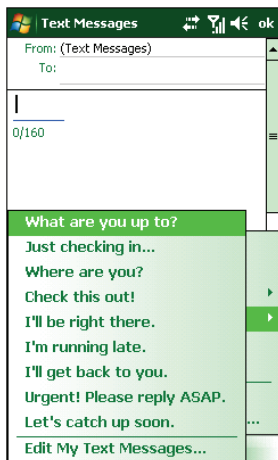

Note:

  If you have problems sending or reading text messages check the following settings – tap **Menu -> Tools -> Options**, tap **“Text Messages”**, and then make sure **“Use Unicode When Necessary”** is selected.

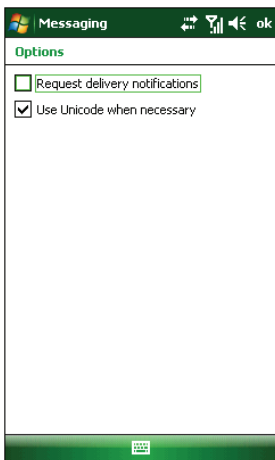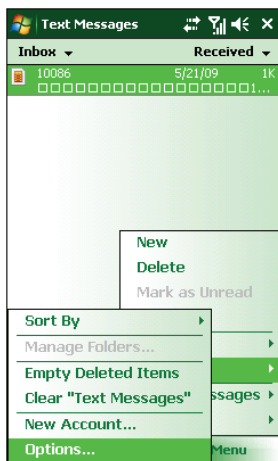

6.2 OUTLOOK

Your phone can send and receive emails as long as your service provider supports this feature. Connect the phone with your PC through a USB cable and use ActiveSync to synchronize with the Outlook.

 
6.2.1 Add New E-mail Account

Your phone supports POP3/IMAP4.

Follow the steps shown below. If you have any questions, contact your service provider.

To set up a POP3 mailbox,

Select **Start -> Messaging -> New E-mail Account**;

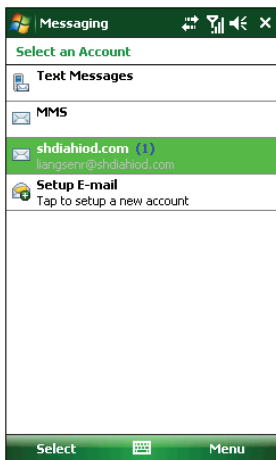

- Enter your E-mail address;
- The phone will try to set up the E-mail account;
- Select your provider;
- Enter your name and the account display name;
- Specify the server addresses for sending and receiving E-mails. You may obtain these addresses from your provider;
- Enter your name, E-mail address and password;
- Enter the server address for sending E-mails;



- Tap **Option** on the last screen where you can specify the time interval to connect and check for new mails;
- To send an E-mail, you are required to select ID verification ;
- Tap **Review All Download Settings** on the last screen where you can specify the time interval to connect and check for new mails; tap **Finish** to exit;
- Tap **Send/Receive** in the **Menu** to receive new E-mails and send the E-mail(s) in the Outbox.

6.2.2 Send E-mail

Before you send or receive the first E-mail from this phone, set up your account (refer to settings) and the network (it's ready with default values).

1. In Outlook, tap New to edit a new E-mail;
2. Enter the recipient's E-mail address. If the contact's information contains the E-mail address, you may tap Add Recipient... in the Menu. Multiple recipients can be added.
3. After entering the E-mail address and the subject, press the navigation key to move the cursor to the editing box. To write an E-mail, refer to Input method
4. After compiling the E-mail, tap Send to move it to the Outbox; select Send/Receive in the Menu before it can be actually sent out. By default, a copy will be kept in Sent Items.

6.2.3 Send Email from Outlook

If your service provider or the SIM in your phone does not support E-mail, you may send it through Outlook on your PC that has access to the Internet.

1. Compile an E-mail in **Outlook E-mail** and then tap **Send**. The E-mail is kept in the Outbox.
2. Launch ActiveSync in your PC, and connect your phone to the PC through a USB cable.
3. After the PC has detected your phone, it shows the connection on the screen. Tap **Next**.
4. On the item selection screen, select **E-mail** and then tap **Next** until finish.
5. The synchronization starts. After it's done, the E-mail(s) in the Outbox are transferred to the Outbox in Outlook.
6. Press Send/Receive in Outlook to start sending.



6.3 MMS

MMS contains text, pictures, audio and other multimedia that can be transmitted instantly between mobile devices, or between mobile device and the Internet. Before sending or receiving an MMS, configure the MMS center.

MMS Profile Settings

Profile Name: China Mobile

MMSC Address: http://mmsc.monternet

Data Connection: CM MMS

Gateway: WAP 2.0 Gateway

IP Address: 10.0.0.172

Port: 80

Done [Central Icon] Cancel

Edit and send MMS

- Tap **Menu**, and select **New** to open the editing box. You can customize the template or choose favorite send MMS, MMS to open the editor interface. Options include BCC, CC, To, Subject, Insert Image or Video, Audio and Insert Text.
- Enter the recipient's phone number in "To" or click on the "recipient" to enter from the contact list. Your phone supports group sending to multiple recipients.
- Specify BCC, CC and Subject, tap **Insert Image** or **Video**, **Insert Text** or **Insert Audio**, depending on your choice. To discard the message, select **Cancel Message** in the Menu.
- Select **Add Recipient** in the Menu to display the contact list (of both the SIM card and the phone), and then choose a contact or phone number. The contact's name will then automatically be inserted into "To". Of

course, you can also choose to contact the lower right corner of the menu Click Interface to create a new contact.

- Select **Insert** in the Menu; the sub-menu contains **Image** or **Video**, **Audio**, **Record Audio**, **Test**, **Frames**, **Templates** and **Attachment**. Select one of them to display the screen for file selection. If the file list is empty, you may create a new one.
- Select **Priority** in Menu; choose High, Normal, Low Priority.
- From the Menu in the MMS, you can also choose Recipients, Insert, My Text, Slide, Remove, Preview, Save To and cancel message. Process each of which there are specific operation.
- After editing, tap **Send**.

6.3.1 Change MMS settings

Check your device to see if it is configured with your wireless service provider's MMS settings. If the MMS settings are not yet configured on your device, you can add the settings while composing an MMS message.

To configure MMS message settings

1. Tap **Start->Messaging**
2. Tap **Menu->Options->MMS**
3. Tap **MMS Profiles**
4. Tap **NEW**

Messaging [Back] [Signal] [Ok]

Profile Settings

Profile Name:

MMSC Address:

Data Connection:

Gateway:

IP Address:

Port:

123 1 2 3 4 5 6 7 8 9 0 = [Back]
Tab q w e r t y u i o p []
CAP a s d f g h j k l ; '
Shift z x c v b n m , . / [Back]
Ctl [Alt] [Shift] [Back] [Forward] [Ok]

Done Done Cancel

- **MMSC** - URL address of the server where MMS messages are stored.
- **Data Connection** - Select the connection that your device uses for MMS messages.
- **Gateway** - Select either WAP 1.0 or WAP 2.0, depending on which one is being used by your other Wireless Service Provider.
- **IP Address** - Location of the MMS server, which is usually in the form of an IP address.
- **Port** - HTTP port number used for connecting to the MMS server and for file transfer.



Note:

- If your device already has preset MMS settings, it is recommended that you do not change these settings. If you change the preset settings, your device may not be able to send and receive MMS messages.
- If you add several MMS message - service providers to the settings screen, you can choose one as your default provider.

6.3.2 Receive MMS

When there's an incoming MMS, your phone will display alert. Download and read the MMS in the Inbox.

6.4 MENU FOR MESSAGING AND E-MAIL

The following options are available in the **Menu** for messaging and E-mail:

New – To create a new message.

Reply – To reply to the sender.

Reply All – To reply to the sender and all the recipients.

Forward – To forward this message to others.

Move – To move this message to another folder (Draft, Outbox, Inbox, Sent Items or Deleted).

Mark as read (unread) – To mark the message as read or unread.

Download (E-mail) – Only for E-mail. Since a phone only receives an E-mail's header and subject, you may want to download the whole E-mail for details.

Send/Receive – To send and receive messages and E-mail(s).

Switch to – To switch between text message, MMS and E-mail, or to other folders.

 
Tools – To administrate folders and set up features.

MMS Settings – To set features for MMS.

Copy to SIM – To copy the data in the phone to the SIM card.

6.5 FOLDERS FOR MESSAGING AND E-MAIL

Drafts, Inbox, Outbox, Sent Items, Deleted Items

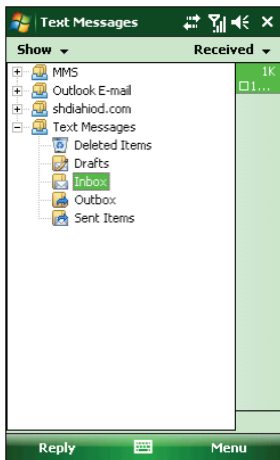

Drafts – To store messages to be sent later.

Outbox – To store messages failed to send out.

Inbox – To store received messages.

Sent Items – To store messages already sent out.

Deleted Items – To store messages deleted from other folders. Messages deleted in this folder will be permanently removed.



 
7 MULTIMEDIA

7.1 WINDOWS MEDIA PLAYER MOBILE

The build-in Windows Media Player® Mobile can play audio and video files stored in the phone or the storage card.

7.1.1 Play

Tap  and then select **Windows Media**. The default screen shows the media library. Select the file to play by type, tap **Back** to open the window as shown below, and then select **Now Playing** to display the playlist.

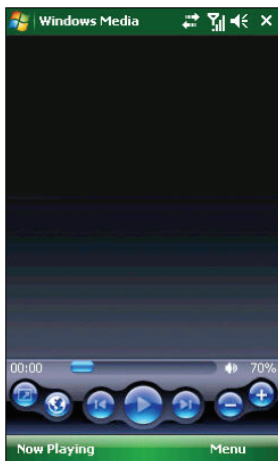

- While playing, adjust volume by pressing the navigation key up or down.
- While playing, select the previous or the next file by pressing the navigation key left or right.

Tap **Menu** as shown below:

Library – To view available files in the library.

Play/Pause – To play or pause a file.





Stop – To stop playing;

Shuffle/Repeat – To play randomly or repeatedly files in the list;

Full Screen – To play video files or stream video on full screen (It's not available for audio files);

Options – Settings of the player (refer to Settings);

Properties – To display details of the file;

About – To view the version of Windows Media.

7.1.2 Now Playing

Tap **Now Playing**. A list of media files shows.

Tap **Menu**, the following options are available.

Library – To view available files in the library.

Move Up – To move a file up by one row.

Move Down – To move a file down by one row.

Remove from Playlist – To remove a file from the list. But the file remains in the library.

Shuffle/Repeat – To play randomly or repeatedly files in the list.

Clear Now Playing – To clear all the files in the list. But the files remain in the library.

Error Details – To show the details of an error.

Properties – To display details of the file.

 




7.1.3 Library

All the audio and video files are stored in the library. You may select and add one or more files to the playlist.

If you want to check audio or video files stored in the SIM card from the library, tap **Library** and select **Storage Card**.

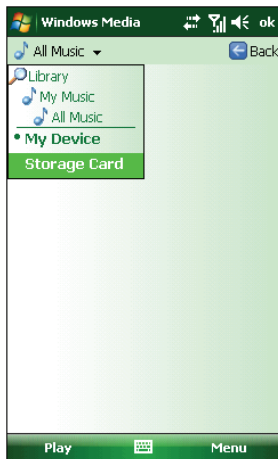


On the main page of library or folders, tap **Menu** to select options to process files in the library.



7.1.3.1 Update Library

If there're additional media files, you need to update the library. Otherwise, the new files can't be located in the library.

 In the library, select Update Library... in Menu. The new files will then be automatically searched and added into the library.

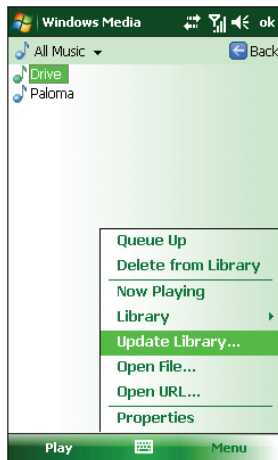

7.1.3.2 Play from Library

You may select a file in the library and then play it.

Scroll the highlight bar in the library with the navigation key, locate a file, and then press the left soft key or the center key.

7.1.3.3 Add Files into the Playlist

Windows Media Player can only play files added into **Now Playing** playlist.

After the library has been updated with new files, and if you want to add them into the playlist, locate the files in the library folder using the navigation keys, select Add to List in the Menu to add them into **Now Playing** playlist.





If you have selected a folder in the library, tapping **Add to List** will add all the files in the folder into the playlist.

7.1.3.4 Delete from Library

Locate the file to be deleted, select Delete from Library, and tap **Yes** to remove it from the library and the phone; or tap **No** to remove it from the library only.

7.1.4 Options

 
Select Option for settings of the player.

7.1.4.1 Playback

Options for playback:

Show time as

The time displaying mode

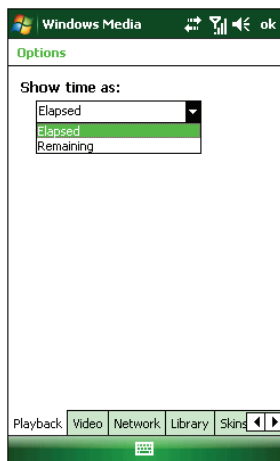



7.1.4.2 Video

Options for screen displaying mode:

Play video in full screen

If the resolution of the file is larger than that of the screen, play video in full screen.

Scaling to meet the window

If the resolution of the file is larger than that of the screen, scale the video size to fit the screen.

7.1.4.3 Network

Select the protocol and connection speed from network for better audio and video effect.

7.1.4.4 Library

In this feature you can set it in the media library on the screen to start player.

7.1.4.5 Skins

You can choose different skins for the player.

7.1.4.6 Buttons

You may re-define the function for buttons in Windows Media Player.

Highlight the button you need to re-define, select **Assign**, and then tap the button of new definition by following prompts. Or, tap **Reset** to restore default settings.

7.1.5 Supported File Formats

Video format	Extension
Windows Media Video	.wmv,.asf
MPEG4	.mp4
H.263	.3gp,.3g2

Audio format	Extension
Windows Media Audio	.wma
WAV	.wav
MP3	.mp3
MIDI	.mid, .midi
AMR Narrow Band	.amr
AMR Wide Band	.awb
AAC, AAC, eAAC	.aac,.mp4,.m4a
MPEG4 audio	.mp4,.m4a





7.2 CAMERA

7.2.1 Cautions in using Camera

- The camera included with your phone is produced and assembled with superior and high precision technologies. However, you should pay particular care when shooting pictures in dimly lit areas to avoid the amount of impurities (e.g., white lines, bright dots, dim dots, etc.).
- Fingerprints, debris or oil present on the lens may result in difficulties in focusing or obscurities in picture quality. Before taking pictures, clean the lens with a lens tissue for optimal results.
- Exposure to high temperatures may result in extremely poor quality picture output.
- Exposure to sunlight may change colors of the built-in color filter which may lead to poor color quality picture output.
- Excess motion while focusing may result in poor quality picture output.
- Do not aim directly into the sun or light source to avoid poor quality picture output.
- Use caution when taking pictures of copyrighted or restricted materials. Even though some pictures are purely for personal use, laws with regard to photo reproduction may protect entertainment events and similar scenarios. When in doubt, ask or look for posted signage.
- Use caution to protect others' privacy while shooting pictures with your phone.

7.2.2 Shooting Photos

Enter the Camera mode by pressing the Camera key or selecting Camera from the Start. The screen shows the picture captured by the camera. Press the center key or the camera key to shoot.

- If you select not to preview after shooting, the system will save the photo automatically and returns to the shooting screen.
- If you select to preview after shooting, the system opens the preview screen where you can save or delete the photo.
- To shoot photos for a tiny object or an object close to the camera, select Macro for better quality.

7.2.3 Shooting a Video Clip

This phone supports video recording. You need to change to its shooting module when you prepare to shoot a video.





Tap **Mode** icon on preview screen. Select **Video** to switch to video mode.

Now press center key or capture key to start shooting.

Length of 30-second, 60t-second and no-limit can be selected. Video length of unlimited is determined by the capacity of memory.

7.2.4 Where Photos and Video Files are Stored

By default, all photos and video files taken are saved to the phone. However, to ensure that there is always enough space left for the system to run other applications, we suggest you to save photos and videos to your storage card.

Perform the following to change the store position:

First, be sure that a storage card has been inserted into the phone.

In the shooting screen, select **Setting -> Storage**.

Change **Save to** storage card and then tap **OK**.

7.2.5 Options

Tap icons on Preview screen to set various aspects of the camera options

Zoom – Select different levels of lens focus.

Brightness – Select a brightness level.

Album – View pictures and videos.

Exit – Exit from camera feature.

Mode – Click the mode icon to switch between Photo and Video mode.

Portrait – Click the Portrait icon to change the shooting time.

Burst – Click the Burst icon to change the number of continuous shooting.

Tap icons on Preview screen to set various aspects of the camera options.

Settings – Set the portrait time and the number of continuous shooting.

Storage – Set the storage position.

Environment – There are several different environments to choose from to obtain the best effect of the viewfinder.

Adjust – Select different shooting effects for the photo.

Capture Setting – Set properties and parameters.





7.3 RADIO

Select FM Radio in Programs

The following window shows:

7.3.1 General

You have to plug in the earphone before opening the main screen.

Two groups of channel can be saved, with 12 channels in each of them.

It supports features such as Auto Search, search a Channel, Volume Adjustment, Mute, Frequency Fine Tune, Frequency Setting, Switch Sound Track and Loud Speaker.

Tap the button on the top-right corner to minimize it.

7.3.2 Auto search

Tap **Search** to start searching channels.

Channels will be saved in the current group; channels already in the group will be cleared.

Up to 12 channels can be searched, and the search will stop.

To search for higher-frequency channels, tap **Search Higher Frequency Channels**.

7.3.3 Listen

Tap one of the channels (1~12) to start listening.

The current frequency, current group and current channel are shown as in the figure above – “5”, “6” and “7”.

7.3.4 Fine Tune

You may fine-tune the radio frequency.

Tap **Reduce Frequency by 0.1MHz** or **Increase Frequency by 0.1MHz**.

After tuning, **Current Channel** shows nothing since the current frequency is different from the one saved. Press and hold any channel button to save the frequency into it.

7.3.5 Search a Channel

Tap **Search Lower Frequency Channels** or **Search Higher Frequency Channels** to start searching until one channel found.

After stop searching, **Current Channel** shows nothing since the current frequency is different from the one saved. Press and hold any channel button to save the frequency into it.



7.3.6 Sound

This feature enables to set:

Earphone/Loud Speaker

Mute


Volume – level 0~8 (default is 4)

 
7.3.7 Frequency Setting

Select **Menu** -> **Setting**, and then specify a frequency (in MHz).

7.4 RECORDER

You can record your favorite sound, and set it to Incoming Call Ring, Alarm, and Message Remind sound through this feature.

- Tap  select **Programs Tap Recorder**, you can enter recorder screen, and tap the bottom left corner of the **Rec** and start recording. You can stop the record via taping **Pause**, and you also can stop it by taping **Stop**, the file will be saved automatically.
- Tap **Menu**, select save to storage or save to memory, the recording will be automatically saved in the choice of the path.

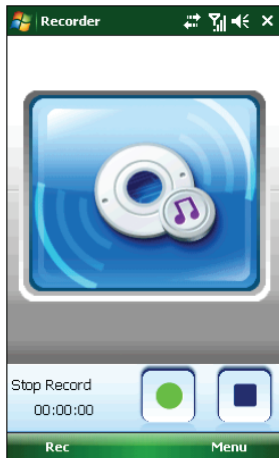



- Long tap an item in the Record File Screen, a menu will pop up and it will display: Play - set as Ring (including Set Incoming Call Ring, Alarm, and Message Remind) and Property.
- In the Record File Screen, select a file, tap **Menu**, we can see record, set as Ring, Play, and stop, file Explorer and Property.



Note:

During recording, the record will be stopped and saved automatically when there is an incoming call / alarm / notification or low battery reminder.

7.5 PICTURES AND VIDEOS

View the images in the phone and the storage card, save one of them as the background, or send it to others.

7.5.1 View Pictures

Tap **Pictures and Videos** to display the list of pictures stored in the phone and storage card.

Tap a picture to open it. Press the left or right navigation key to view the previous or the next image.

7.5.2 Options

The following options are available in the Menu:

Send – To send the image in an MMS or E-mail.

Wireless Exchange – To send the image to others device via Bluetooth;.

Save as Contact – To set a picture as an icon representing a specified contact.

Delete – To delete the image.

Edit – To edit the image.

 
Slide Show – To view the images as a slide show.

Save as “Today” background – To set the image as the desktop background.

Go to –To other directories.

Tools - To view the detail of image and sorting the pictures.


Send to your Space – To send the image to a shared space on the Internet.

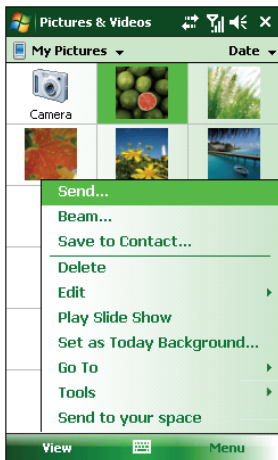

7.6 JAVA

This phone supports JAVA applications. Tap  and Select **Programs**, and then **Java**; All the JAVA application gets displayed.

 You may select the installation path or other operations in the menu.

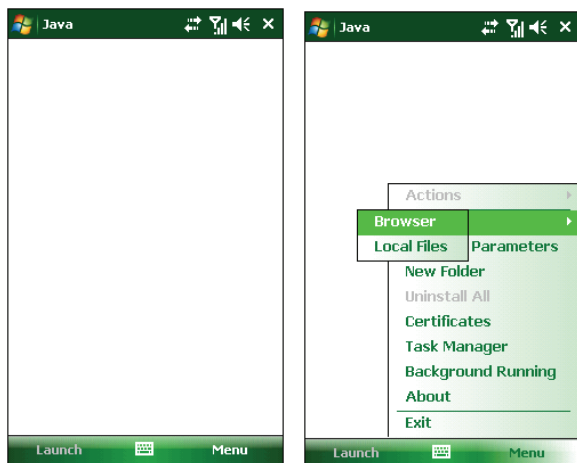

7.7 GAMES

Mobile phones have built-in games:

- **Bubble Breaker**
- **Solitaire**
- **Marble Gamer**

7.7.1 Bubble Breaker

The objective is to align same color bubbles to form large blocks of bubbles before bursting them. The more bubbles you have in the block before they are burst, the greater number of points you will receive.

To burst a bubble, the bubble must be connected to other similar bubbles on the playing board. If you select a bubble that is connected, those



connected bubbles will be highlighted and a new bubble will pop up, displaying that block's potential bubble points. Click your selection again to burst the bubbles.

7.7.2 Solitaire

The objective is to move all the cards in ascending order, from Ace to King, in the four suit stacks at the top.

Use the touch pen to drag and drop the card, or turn the cards facing down.

7.7.3 Marble Gamer


Game Objective: To be smiling grey red marble to move to the location of the marble.

 
Game approach: First, set the Motion Sensor balance-oriented mobile phone that is where the marble rolling.



8 PROGRAMS

Find all the programs in your phone from **Menu** -> **Programs**.

Tap  and then **Programs**.

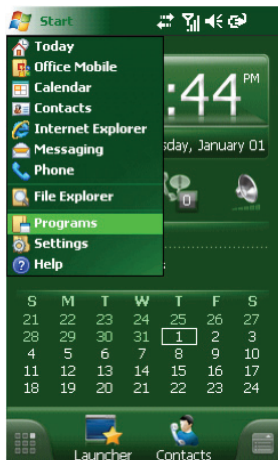




8.1 OFFICE MOBILE

You can compile Word and Excel files, or open a PowerPoint file (you may edit a PowerPoint file in certain circumstances).

 Tap  and then select **Office Mobile** from **Start**. Choose Word mobile, PowerPoint Mobile or Excel Mobile.

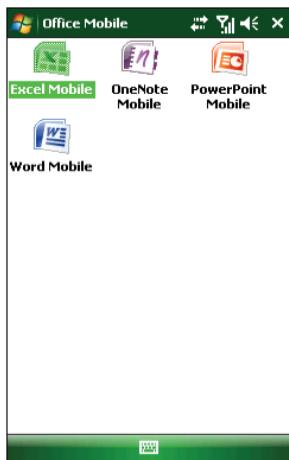




8.1.1 Word Mobile


In Word Mobile, choose a file to open.

 - Tap **All Folders**, and find a file from those folders.
- Tap **New** to create a new file.

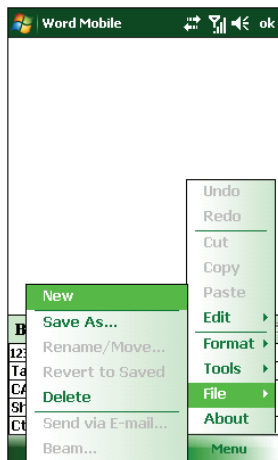


- You can open Word files in several types, including .txt, .doc and .psw.
- If you need the toolbar, tap View on the editing screen, and then select Toolbar.
- After compiling, tap to save and exit.

8.1.2 OneNote Mobile

- Tap , select **Office Mobile** from **Programs**, and then tap **OneNote Mobile**.
- In OneNote Mobile, choose a file to open.
- In OneNote file list, tap **New** to open a new note.
- If you need the toolbar, tap **Menu** on the editing screen, and then select Toolbar.



 
- In OneNote Mobile, you can insert picture and sound recording.
- After compiling, tap **ok** to save and exit.

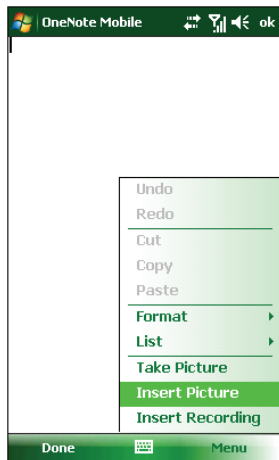

8.1.3 Excel Mobile

Using Excel to create a spreadsheet or to open and edit an Excel file from your PC.

- Tap , select **Office Mobile** from **Programs**, and then tap **Excel Mobile**.
- In Excel Mobile, choose a file to open.
- Tap **All Folders**, and find a file from those folders.

8.1.3.1 New

- In Excel file list, tap **New** to open a new spreadsheet.
- Excel Mobile contains basic tools, such as equation, function and filter.
- If you need the toolbar, tap **View** on the editing screen, and then select **Toolbar**.
- After compiling, tap **ok** to save and exit.

8.1.3.2 Skills

 
Here are a few suggestions in case you need to use Excel Mobile to create a large file:

- View in Full Screen. Tap **View** on the editing screen and then select **Full Screen**. Tap it again to cancel Full Screen.
- Select **Zoom** to scale your spreadsheet to a proper size.
- Use Split to display different editing areas. Select Split in **View**; drag the split box edge to a proper position. Select **Remove Split in View** to restore.
- You may freeze the split pane so that its column and row number can be seen while scrolling. After splitting, select **Freeze Panes in View**. To unfreeze, select **Unfreeze Panes**.
- You can hide the rows or columns in the spreadsheet. Select a cell in the column or row you are about to hide, select **Format in the Menu**, choose row or column, and then tap **Hide** in the submenu. Follow the same steps and select **Unhide** to restore.

8.1.4 PowerPoint Mobile

 
In PowerPoint Mobile, the system shows a list of slides stored in the phone. Use the touch pen to select and open a file to play it in the full screen.

- During the play of slides, tap ▲ to open a menu.

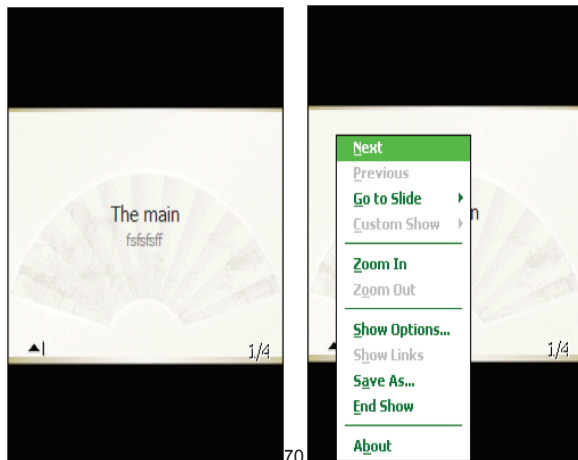


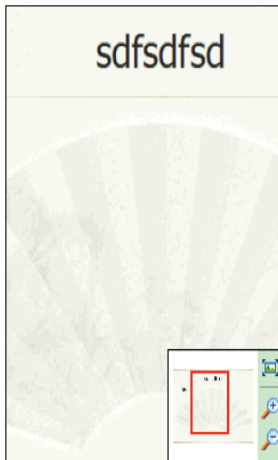 
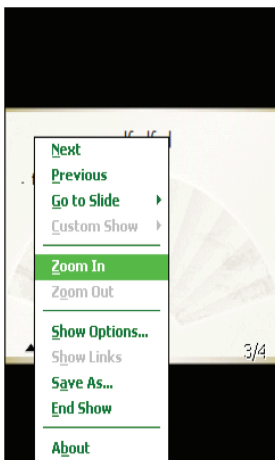 


- Tap **Go to Slide** to view a selected slide.

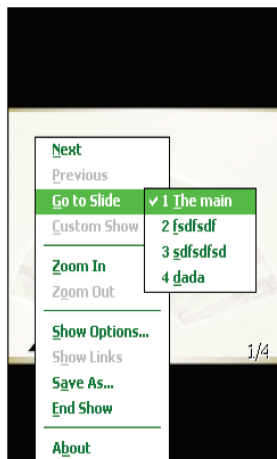 




- Tap **Zoom In** to watch the slides in full screen. In the preview window (at lower right corner), drag the slide to the section to view. Tap  to exit from Zoom In.



- Tap **End Show** to return.

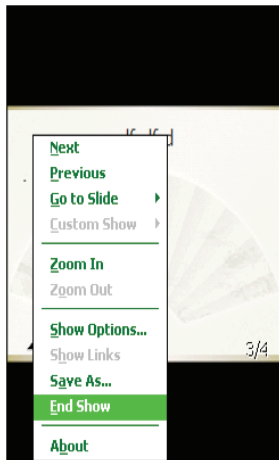

8.2 INTERNET EXPLORER

Using Internet Explorer (IE), you can connect your phone to the Internet or network-based applications. Your phone supports connection to the Internet via a common data call, or surfing the Internet through GPRS on a GSM network. Deploying any of these powerful functions keeps you connected to the world at any given time.

To connect your phone to a network with IE, you need to:


- Make sure that your SIM card supports Internet connection. Contact your service provider for confirmation.
- Subscribe data or GPRS service from your service provider.
- Set up the functions for IE on your phone.



Note:

 
The ability to access WAP depends on the service provider and whether you have subscribed the service.

8.2.1 Starting Internet Explorer

- Tap  and then select Internet Explorer.
- The system will connect to the homepage.
- You may enter a website address in Address Bar and then tap the green arrow or press the center key.

8.2.2 Menu

While online, tap **Menu** for the following options:

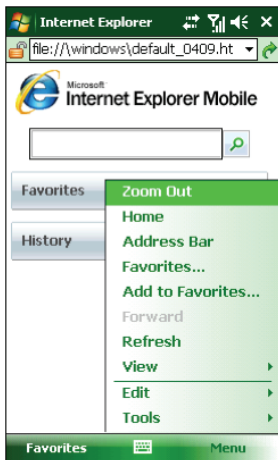

Zoom Out - Zoom out the page for displaying web pages.

Home - Go back to the homepage.

Go to Web Address - To enter a website address in address bar.

Favorites - To open the list of your favorites.

Add to Favorites - To add a new entry, such as a website name or address and the folder's name.

Forward - To go to the next webpage.



Refresh - To reload the webpage.

 
View - Select a view mode for browsing pages.

Edit - To cut / copy or paste text on the webpage.

Tools – To show the list of the recently visited Webpages, send a hyperlink via message, view the properties of the webpage, or set up the browser.

8.3 WINDOWS LIVE

Tap  and then select **Windows Live** in **Programs**.

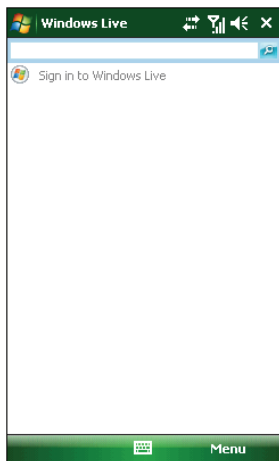



8.3.1 Messenger

Chat with your friends with Messenger. You need to have an account of MSN, Hotmail or Yahoo.



8.3.2 Sign in

 
Set up your username and password before signing in to Messenger.

- Tap **Sign In**.
- Enter your E-mail address and password, and then tap **Sign In** again.




Send a Message

- After logging in to MSN, select a friend online; a dialog box will appear. You can send your messages now.

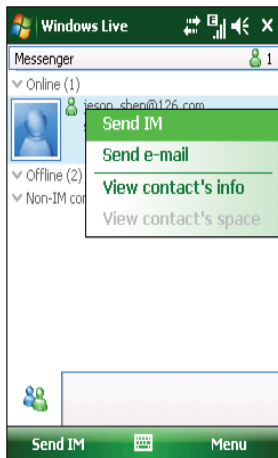

 - To exit, select **Menu -> End conversation** in the dialog box.

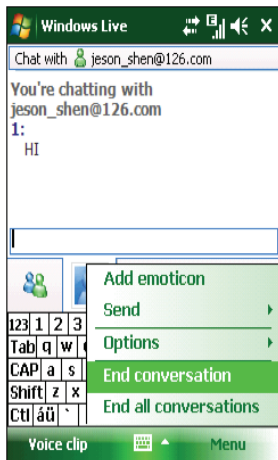

8.3.3 Add Participants

While you are chatting with a friend, you may invite another one.

Select **Menu -> Options -> Add participant**, and then tap **Add**.

While there are several people in chatting, select **Menu -> End all conversations** to go back to the friend list. You may select a friend for a private conversation.

8.3.4 Block and Unblock Contact

After you have blocked a contact, he/she can't view your online status or send you instant messages.

Select the contact to be blocked from the list, and then select **Menu -> Block**; Select **Unblock** to restore.



8.3.5 Change Online Status

Select **Menu -> Online Status**, choose a status from the list, and then press the center key.



Note:

You can change your online status only after you have signed in to MSN.

8.3.6 Hotmail

You can compile or read your Hotmail.

Refer to **Messaging** for editing, sending or receiving E-mail(s).

Write a new Hotmail.

You may open the editing screen.

Refer to **Messaging** for editing and sending E-mail(s).

8.3.7 Live Mobile Homepage

Select to go to Live Mobile Homepage.

8.3.8 Windows Live Help

Select to get help on Windows Live.

8.4 ACTIVESYNC

With Microsoft® ActiveSync®, the data in your phone can be synchronized through a USB cable or Bluetooth with the PC.

ActiveSync® will make sure the information in the phone can be updated with that in the PC.

You should follow the prompts on the screen to install ActiveSync from the CD-ROM to your PC.

8.4.1 Use ActiveSync

8.4.1.1 Sync with PC

After having ActiveSync installed, connect your phone through a USB cable to the PC.

Follow the on-screen instructions to establish the relationship between the PC and the phone. The synchronization process will start automatically when the relationship has been established. Outlook Contacts, Appointments, Tasks, E-Mail(s), etc. will be synchronized to the phone.

Standard Partnership allows synchronization and transmission of data between your phone and the PC, while **Guest Partnership** can be



selected if you want to only transmit information.

On ActiveSync status window, click **Sync** to start the sync process, or click **Stop** to end syncing.



Note:

By default, not all the Outlook information will be synchronized. You have to select from the available options.

8.4.1.2 Sync with Server

Before synchronization, contact your administrator or service provider for such information as the server name, username and password.

1. From the ActiveSync screen, select **Menu -> Add Server Source**.
2. Enter the mobile information server's address in **Server Address**.
3. Enter **Username** and **Password**.
4. Enter the domain name of your Exchange server in **Domain**.
5. Press **Done**, and then **Synchronize**.

Hint: After setting up a relationship between the phone and the PC, you may connect the server remotely.



Note:

The password is case sensitive.

8.4.2 Synchronization

8.4.2.1 Synchronizing Inbox

- By default, only the mails (each with the first 500 bytes) in Inbox on the PC or on the server that were received in the latest three days will be synchronized. To read the complete e-mail, you have to download it.
- Mails in the phone and mails in the PC are in-sync. For example, deleting a mail in the phone or in the PC will have the mail deleted in the PC or in the phone during the next-time synchronization.
- To synchronize mails in other folders or directories, select them in the phone.



Note:

Text messages and MMS can't be synchronized.



8.4.2.2 Synchronizing Appointment

- You can synchronize Appointments in the phone with those in Outlook or the Mobile Information Server 2002 (or higher) on the PC.
- By default, only the Appointments in the past two weeks and the future appointments will be synchronized.

8.4.2.3 Synchronizing Contacts

- All contacts are synchronized by default.
- Adding or deleting a contact in the phone or in the PC will have the same result in the PC or in the phone.

8.4.2.4 Synchronizing via Bluetooth

Via Bluetooth, your phone can connect and synchronize with other mobile devices or PCs.

8.4.2.5 Installing Software on the phone

You may use ActiveSync to install software on the phone from your PC.

1. Connect the phone and the PC through ActiveSync.
2. Run the setup file in the PC.
3. Select a setup path in the phone, and then start installing. If there's a storage card, the system will alert you to choose a location.

8.5 CALENDAR

Use Calendar to remind you of meetings and anniversaries, and to keep track of your tasks and other notes.

8.5.1 Calendar Views

Tap  and then select **Calendar** to display an appointment list.

Tap **Day** to switch among **Day**, **Week**, **Month**, **Year** and **Agenda**.

8.5.2 New Appointment

Tap **Menu** -> **New Appointment**, and then create an appointment reminder.

8.5.3 Settings

Select Options in the menu to change the settings for your calendar.

8.6 TASKS

Use Task to track what you have to do. Most of the tasks come from Microsoft Outlook® after synchronization.

8.6.1 Synchronizing Tasks on PC

To synchronize Microsoft Outlook's Task entries from your PC to your phone, launch ActiveSync®, and connect your phone with the PC through a USB cable. The system will automatically start synchronizing.






Tap a **task** entry to view its details.

8.6.2 Adding a Task on your phone


- Tap **Menu -> New Task** to open the screen adding a new task.
- Fill in details, tap **ok** to save and exit.

8.7 NOTES

You may take Notes or voice Notes.




- Tap , select **Programs -> Notes** to display a list of notes in the phone; tap **Name** to change the sorting type.
- Tap a file in the list to open it.
- Tap **All Folders** to search for a file in those folders.

 
8.7.1 New Notes

- Tap **New** to create a new note.
- To write a note, you may either use the build-in IME, or draw with the touch pen (select **Menu -> Draw**).
- Tap **Menu -> Draw Again** to cancel drawing.
- Tap **Menu -> Undo Typing** to remove the last character; tap **Redo Typing** to store.
- After compiling, tap  to save and exit.



8.7.2 Adding Voice in Notes

- Tap **Menu** -> **View Recording Toolbar**; tap  to start recording. Tap  to stop.
- After recording,  shows in the note. Tap it to playback.

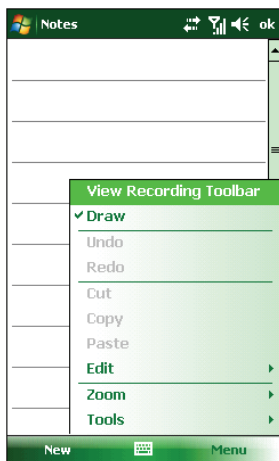


8.7.3 Creating Voice Notes

To create a voice note, tap **Menu** -> **View Recording Toolbar** and then record.

8.8 INTERNET SHARING

 After the phone connects to the PC through a USB cable, it can work as an external Modem.

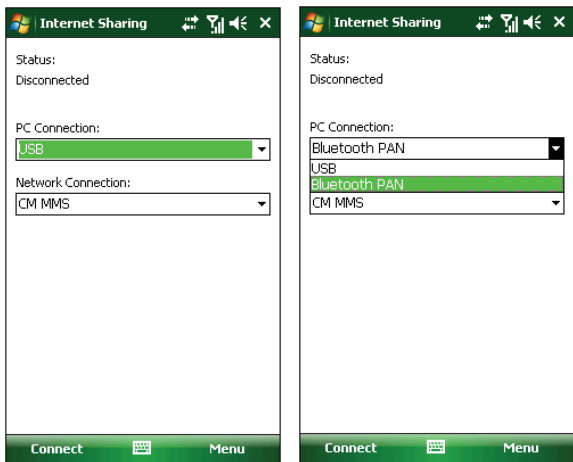

Select **Start -> Programs -> Internet Sharing**, and then choose PC connection and Network connection.

But first, you have to make sure your phone can access the Internet.



Note:

- To connect via Bluetooth, use a Bluetooth Adapter.
- Disable the network connection on your PC before using the connection through the phone.
- While the Modem mode is on, synchronization is disabled.
- The availability of modem function depends on your service provider.



8.9 CALCULATOR

You can make calculations including addition, subtraction, multiplication, division and percentage.

Enter the numbers and operator on the panel, and tap **=** to have the result. **C key** can be used to clear the input number or the result.

8.10 SEARCH

 
You can quickly search any files in the phone.

Enter the file name and select the file type, and then tap **Search**.

8.11 FILE EXPLORER

You can manage files in the phone. However, it's recommended not to modify or delete system files.

Options are available to change the displaying mode and system operation.

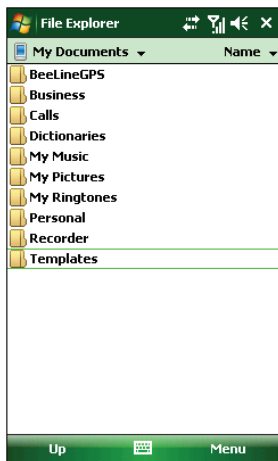

8.12 GETTING STARTED

You can realize some modules function in the phone, include the following function: make a Call; set Date and Time; set up E-mail; set up a device

 
Password; set up a Bluetooth Headset; set Background; set Ring Tone; transfer Music; add/remove getting started.

You can tap one item/view, or press left soft key, then enter the option function describe interface.

8.13 TASK MANAGER

Task Manager displays detailed application about all running processes; this program will be useful to those looking for an extra layer of system protection. You can look for and end the program.

Select **Start->Program->Task Manager**, then tap **Menu**, you can switch to or end all tasks; view applications or processes; sort by memory or CPU or name.

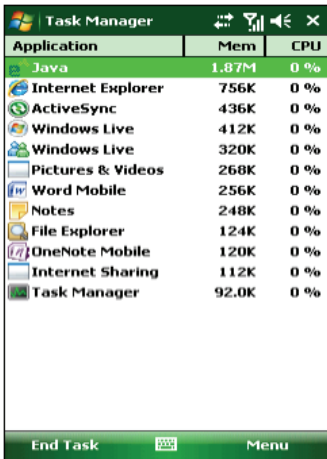


Application	Mem	CPU
Java	1.87M	0 %
Internet Explorer	756K	0 %
ActiveSync	436K	0 %
Windows Live	412K	0 %
Windows Live	320K	0 %
Pictures & Videos	268K	0 %
Word Mobile	256K	0 %
Notes	248K	0 %
File Explorer	124K	0 %
OneNote Mobile	120K	0 %
Internet Sharing	112K	0 %
Task Manager	92.0K	0 %

8.14 SPB HOME

The SPB Home have same shortcut menu you can expediently to use.

The main window has a new and fresh design for the Windows Mobile Interface, thumb optimization icons at the bottom for quick access, changing panel with gesture, and animated transitions. The three user interface panels are the Now Screen, SPB Home, and Quick Dial.

When open the phone while showed the SPB Home, In SPB interface, drop  icon, choose "Show Today", while showed the Smart Today.






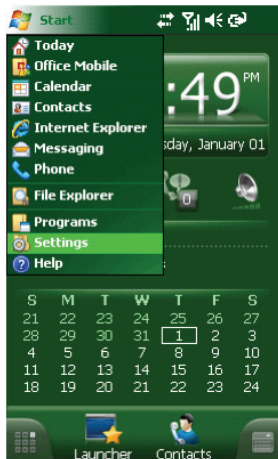 
8.14.1 Quick Dial

This option lets you make out the quick dialing for any contact available in the phone.



9 SETTINGS

Tap  and then select **Settings**.



9.1 PERSONAL

In **Personal**, you can customize your phone.

9.1.1 Owner Information

Specify your Name, Telephone Number, E-mail and other information.

9.1.2 Today

Select a theme for your device and items on the Today screen.

9.1.3 Sounds & Notifications

Specify the sound and notification for events, programs, screen taps and hardware buttons.



9.1.4 Buttons

Define the button for programs for quick launch.

- In Program Buttons, select a button, assign a program, and then tap **ok**.
- Select **Camera** in **Select a button**, assign a program, and then tap **ok**. Now, press the Camera key to quickly launch the program.
- If the screen scrolls too fast or too slow, change it in Up/Down Control.

9.1.5 Phone Phone

Select the ring type and ring tone, or choose whether to have buzz sound when pressing keys.

Security

You can require PIN when the phone is used, and change PIN /PIN2.

Services

Get settings for Call Barring, Caller ID, Call Forwarding, Call Waiting, and Voice Mail and Text Messages.

Network

Find out the network serving your phone; or tap **Find Network** or **Set Networks** to list other available networks.

Fixed Dialing

Fixed Dialing feature allows users to restrict their outgoing calls and messages to selected phone numbers, included in a fixed dialing list. Once the service is activated the user can only call and send messages to the phone numbers from the list. The capacity of the fixed dialing list depends on the capacity of the SIM card. The list is protected by a PIN code.

Cell Broadcast

As a network service, Cell broadcast is provided by your service provider to broadcast weather, traffic and other text-based messages. To use this service, set the channel from the service provider. The availability of the service depends on your local provider.

From **Start -> Settings -> Phone**, select **Cell Broadcast**. Tap **Cell Broadcast** to display a list with options:

New: To add a new channel.

Edit: To modify a channel.





Delete: To delete a channel.

Delete All: To delete all the channels.

Cancel: Cancel the settings and return to the previous screen.

Select **Enable Cell Broadcast** and then tap **OK** to enable Cell Broadcast.

9.1.6 Menus

Select items to add into  Start Menu. Up to 7 shortcuts can be added.

9.1.7 Input

Select a default input method, specify the usage of input methods, and select file format for recordings.

9.1.8 Lock

Lock the phone automatically after it's been idle for a while. A password is required every time to activate or switch on your phone.

9.2 SYSTEM

Set up functions in **System**.

9.2.1 Device Info

View the hardware/software and GPRS Traffic information about your phone.

You can view the GPRS Traffic by different connection mode, and it will be cleared when you point Reset.

9.2.2 Memory

View the allocation of memory for storage and programs, and memory in-use and remains of the phone and the storage card.

9.2.3 Remove Programs

Remove un-necessary programs to release storage space. System programs cannot be removed.

In the program list, select a program and then tap **Remove**.

9.2.4 Regional Settings

Specify the region you are at and the local number, currency, time and date.

9.2.5 Master Clear

Your phone will be resumed to default factory settings and all the user data will be formatted. Back up important data.

9.2.6 Clock & Alarms

Adjust the date and time or set your alarm.

- Set the time zone, date and time.



- Set the alarm, select the box to activate it. Your phone will alarm you every day at the time.

9.2.7 **Power**

Show the battery level and the time to turn off the device if not used.

9.2.8 **Backlight**

Set the time to turn on or off backlight.

9.2.9 **Certificates**

Manage certificates in the phone.

9.2.10 **Screen**

Align the screen if it is not responding accurately to stylus taps.

Adjust the text size to see more content or increase the readability in many programs.

9.2.11 **Error Reporting**

To help Microsoft improve the products you use, your device can collect information on software operation for later reporting in the event of a serious error. Reporting this information when errors occur is completely voluntary and confidential.

9.2.12 **Encryption**

Encrypt documents when saving to the storage card.

1. Tap **Start -> Settings -> System -> Encryption**.
2. Select the document to be encrypted to the storage card.



Note:

Encrypted documents can only be read on the phone encrypts them.

9.2.13 **About**

View the Version Device ID and Copyrights information about your phone.

 
9.2.14 **Motion Sensor**

Select **Start -> Settings -> Motion Sensor**, Motion sensor property page.




Balance

Select **Balance Setting**, please put your pocket PC on the horizontal panel and then click **OK** button.

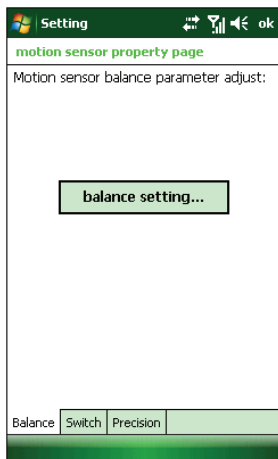

Switch

 
Switch the motion sensor in corresponding applications.

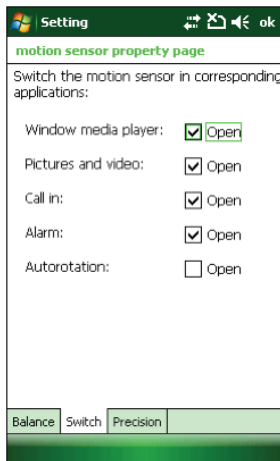

1. Open the above four feature, Window media player you can shake the phone to the next one and on the realization of a function; pictures & videos mobile phone you can picture shaking switch; calls you can shake the phone to answer the call If you want to mute calls, as long as the rock face down a mobile phone handset can be realized; alarm clock when cell phone to cell phone as long as the rock face down to cancel the alarm.
2. Autorotation default state is closed, while you want to use please open that function in Motion Sensor Settings.

Precision

 Set the precision of the swing motion.

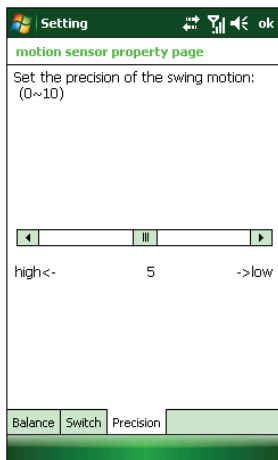

9.2.15 GPS

Your phone has a GPS receiver that uses satellite signals to calculate your location.



Note:

If you cannot use some GPS features, please configure your Internet Explorer settings

Using GPS

Your location can be found when you have a clear view of the sky. If your location is not found after a few minutes, move to another location. To help the search, stand still and do not cover the GPS antenna.



 
Note:

If you are using GPS for the first time, it may take up to 10 minutes before your location is found.



9.2.16 AGPS Settings

Select **Start** -> **Settings** -> **AGPS Settings**, enter into AGPS Settings Interface.

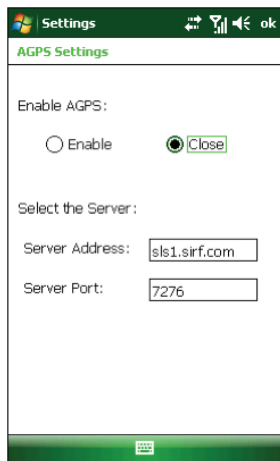

Open AGPS Function

1. Enter in to AGPS Settings Interface.
2. Select Enable in Enable AGPS option.
3. Click **OK**.
4. Open any GPS program, the phone will auto download satellites' coordinate, when download completes, you will be able to quickly find the stars and positioning.

9.3 CONNECTIONS

Set up connections for your phone.

 
9.3.1 Beam

Transfer data to other wireless devices via Bluetooth.



9.3.2 Wireless Manager



Enable/disable Bluetooth, Wi-Fi, data transmission and Fly mode, as shown below:

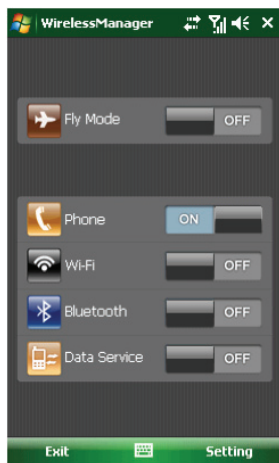

- Tap **Fly Mode**, then Bluetooth, data transmission, phone and Wi-Fi are disabled. Calls can't get through this phone. Tap **Bluetooth**, **Phone** and **Wi-Fi** to enable or disable all or some of them.
- Select **Bluetooth** or **Phone** and **Wi-Fi**, and press center key to switch it on/off.
- Select **Bluetooth Setting**, **Phone Setting** or **Wi-Fi Setting**.
- When there is data transmission or GPRS traffic, Data transmission icon is on. After the transmission is over, the icon turns off.

9.3.3 Wi-Fi

  
Set up Wi-Fi and the network card. The setting page shows only after Wi-Fi is on.

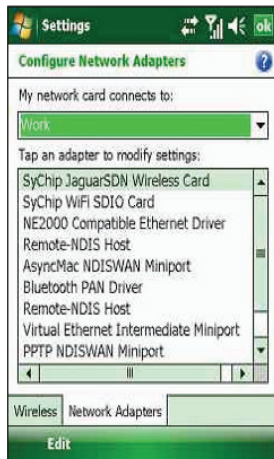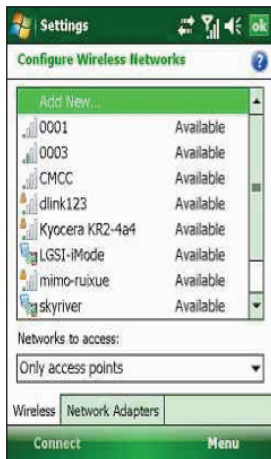

9.3.4 Bluetooth

As a short-distance wireless transmission technology, Bluetooth can communicate with a phone that is within 10 meters.

 - Enable or disable Bluetooth.
- If **Make this device visible to other devices** is selected, your phone will receive all the Bluetooth connection requests, both from your Bluetooth device and from others'. Select it with caution.

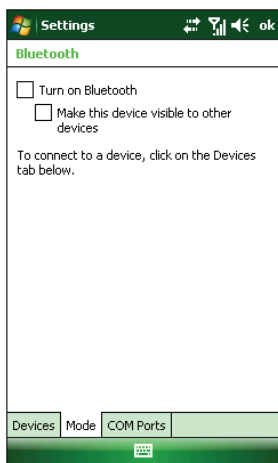


- Select **Devices** -> **COM Ports**, add new device to search for other Bluetooth devices or a COM port.

Need authentication when receiving data via Bluetooth.

Bind a Bluetooth device:

Switch on the Bluetooth device within effective range.

 Select  **Start-> Settings -> Connections -> Bluetooth -> Devices**, tap **Add New Device**.

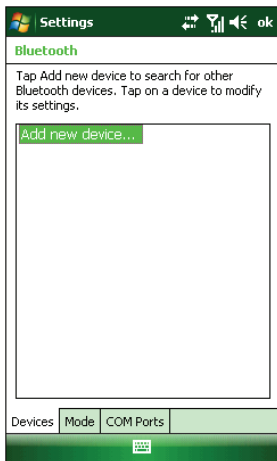


The system starts to search for Bluetooth devices.

After a Bluetooth device has been found, you are prompted to enter the secret-key. The key can be obtained from the Bluetooth dealer or specified by you. Once the secret-key is entered, the binding process is done.

Beam Files:

 
In the file list, tap **Menu** -> **Beam File**.

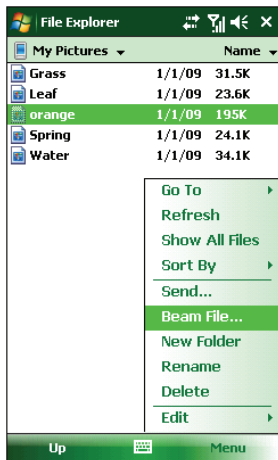



After the phone has found the Bluetooth device, tap **Send**.

 After the transmission is done, tap **Receive** on the other device.

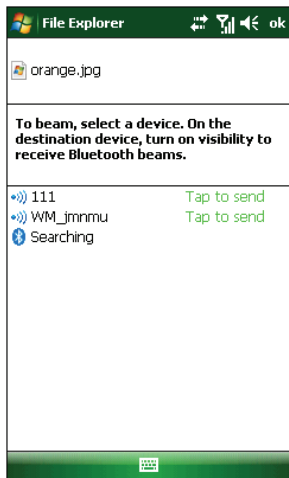


Receive a file via Bluetooth:

Make sure you have enabled **Wireless Data Exchange**, and have selected **Make this device visible to other devices** Mode.

Keep your phone within 10 meters away from the sending device.



 When the phone prompts there's an incoming file, tap **Yes** to start receiving. The received file will be saved in \My Documents.

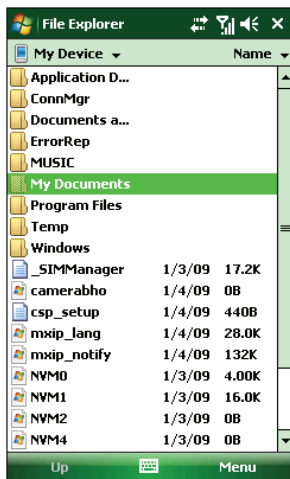



9.3.5 Connections

By connecting to the Internet or Intranet, you may surf the web or the private network, send/receive E-mail(s) and instant messages, and synchronize through ActiveSync.

The connection can be set up through a modem, wireless network or a network card, where the modem connection includes an external modem, or a cell phone and GPRS.

 
9.3.5.1 GPRS

To add a new GPRS connection

When you need to add another GPRS connection on your device, obtain the Access point name from your Wireless Service Provider. Also, check if a user name and password are required.

Tap **Start->Settings->Connections**, and tap **Connections**.


In Connections, under **My ISP**, tap **Add a New Modem Connection**.

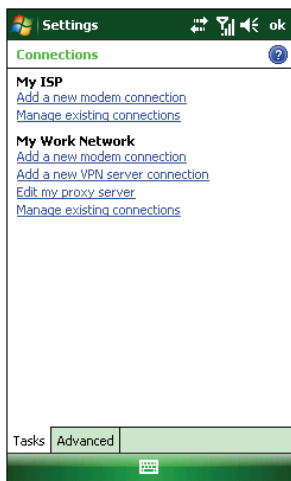



In **Enter a name** for the connection, you can enter any name you like.

 In **Select a modem** Select **Cellular Line (GPRS)**, and tap **Next**.

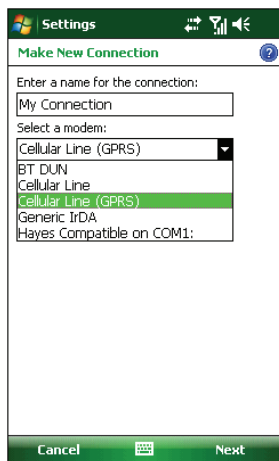

Enter the **Access Point Name** and then tap **Next**.

Enter the username and password, only if required, and tap **Finish**.

9.3.5.2 Dial-up

 
To set up a dial-up connection to your Internet Service Provider (ISP) on your device, you need the same settings that you normally use when you dial up from your computer. This includes the ISP server phone number, your username and password.

Tap **Start->Settings->Connections**, and tap **Connections**.

In Connections, Under **My ISP**, tap Add a **New Modem Connection**.

In Enter a name for the connection, you can enter any name you like.

In selecting a modem, Select **Cellular Line** and tap **Next**.

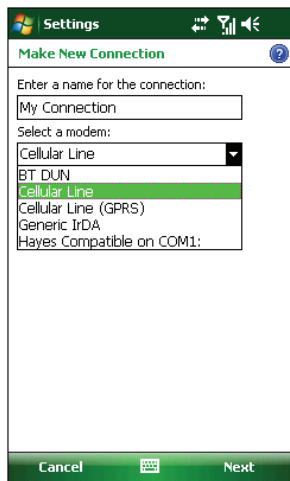

Enter the ISP server phone number, please refer to the picture below, and then tap **Next**.



Settings

My Connection

Enter the number exactly as it should be dialed. Include any extra numbers, such as an outside line or credit card.

123 1 2 3 4 5 6 7 8 9 0 - = ⬅
Tab q w e r t y u i o p []
CAP a s d f g h j k l ; '
Shift z x c v b n m , . / ⬅
Ctl á ü ` \ _ { } | ~

 
Back Next

Enter the username and password required, and then tap **Finish**.




9.3.5.3 Connect to PC through USB

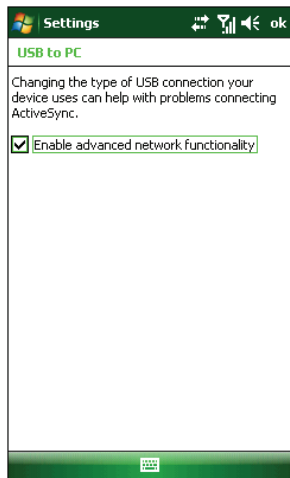

Change the type of USB connection your device uses. It can help with problems connecting ActiveSync.



 10 HELP

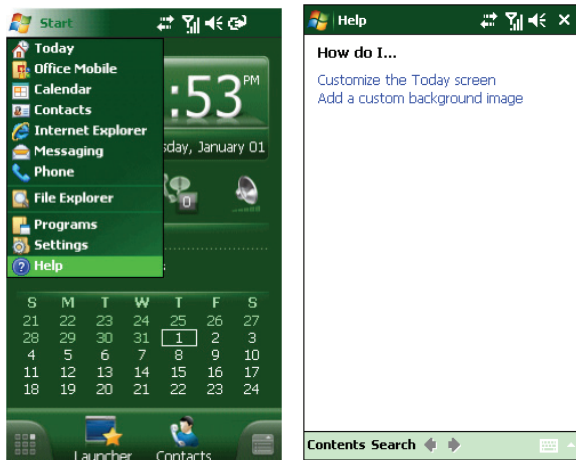Tap  in the Start menu, select Help to open the Help page.



- You can learn the features of your phone and how to use it through Help. Tap with the touch pen to browse details.
- Tap  or  to turn to the previous or the next page you just viewed.
- Tap **Search** to locate what you want to learn.





TROUBLESHOOTING

Check these questions first if you have problems with your phone. If you need additional help, contact your dealer or service provider.

Question	Cause	Answer
Internet Explorer can't connect to the Internet.	The service provider does not offer such a service or you have not subscribed to it.	Contact your service provider on subscription and use of the service.
	Incorrect configurations.	Refer to the help of Internet Explorer.
SIM card error	The SIM card has been damaged.	Consult your service provider.
	The SIM card is incorrectly inserted.	Check the SIM card to make sure it is inserted properly.
	Metal surface of SIM card is unclean.	Clean the metal surface with a clean cloth or tissue.
Poor signals	The area with poor reception of signals, such as vicinity of high rise or the basement, where RF wave can't reach effectively.	Receive calls in places where a good signal is available.
	Peak hour with congested traffic.	Try a different time to use your phone.
Fail to power on	Using an excessively low battery.	Charge the battery.
Fail to make calls	Call barring service enabled.	Disable it.
Fail to connect to network	Invalid SIM card.	Consult your service provider.
	Out of GSM service area.	Relocate your phone into service area.
	Poor signals.	Relocate your phone to places with strong signals, and then try again.
Fail to charge	Inconsistent voltage between the AC outlet and the charger.	Replace a charge with consistent voltage.
	Non-standard charger	Use a charger designed for this type of phone.
	Improperly connected to the main power.	Check the connection in between.



